

**Libretto istruzioni**

**Instructions Manual**

**Manuel d'Instructions**

**Bedienungsanleitung**

**Gebruiksaanwijzing**

**Manual de instrucciones**

**Manual de Instruções**

**Brugsvejledning**

**Bruksanvisning**

**Руководство по эксплуатации**

**Instrukcja Obsługi**

**Bruksanvisning**

**کِتیب الاستعمال**

**Käyttöohje**

***KSP60XE - KSP90XE - KSP120XE***

## INDICE

IT

CONSIGLI E SUGGERIMENTI.....	5
CARATTERISTICHE.....	8
INSTALLAZIONE.....	10
USO.....	11
MANUTENZIONE.....	12

## INDEX

EN

RECOMMENDATIONS AND SUGGESTIONS.....	14
CHARACTERISTICS.....	17
INSTALLATION.....	19
USE.....	20
MAINTENANCE.....	21

## SOMMAIRE

FR

CONSEILS ET SUGGESTIONS.....	23
CARACTERISTIQUES.....	26
INSTALLATION.....	28
UTILISATION.....	29
ENTRETIEN.....	30

## INHALTSVERZEICHNIS

DE

EMPFEHLUNGEN UND HINWEISE.....	32
CHARAKTERISTIKEN.....	35
MONTAGE.....	37
BEDIENUNG.....	38
WARTUNG.....	39

## INHOUDSOPGAVE

NL

ADVIEZEN EN SUGGESTIES.....	41
EIGENSCHAPPEN.....	44
INSTALLATIE.....	46
GEBRUIK.....	47
ONDERHOUD.....	48

## ÍNDICE

ES

CONSEJOS Y SUGERENCIAS.....	50
CARACTERÍSTICAS.....	53
INSTALACIÓN.....	55
USO.....	56
MANTENIMIENTO.....	57

## ÍNDICE

PT

CONSELHOS E SUGESTÕES.....	59
CARACTERÍSTICAS .....	62
INSTALAÇÃO.....	64
UTILIZAÇÃO .....	65
MANUTENÇÃO.....	66

## INDHOLD

DK

RÅD OG ANVISNINGER .....	68
APPARATBESKRIVELSE .....	71
INSTALLATION.....	73
BRUG .....	74
VEDLIGEHOLDELSE .....	75

## INNHOOLD

NO

ANBEFALINGER OG FORSLAG .....	77
EGENSKAPER.....	80
INSTALLASJON.....	82
BRUK .....	83
VEDLIKEHOLD .....	84

## УКАЗАТЕЛЬ

RU

СОВЕТЫ И РЕКОМЕНДАЦИИ .....	86
ХАРАКТЕРИСТИКИ .....	89
УСТАНОВКА.....	91
ЭКСПЛУАТАЦИЯ.....	92
УХОД.....	93

## SPIS TREŚCI

PL

UWAGI I SUGESTIE .....	95
WŁAŚCIWOŚCI TECHNICZNE.....	98
INSTALACJA.....	100
UŻYTKOWANIE .....	101
KONSERWACJA .....	102

## INNEHÅLL

SE

REKOMMENDATIONER OCH TIPS .....	104
EGENSKAPER.....	107
INSTALLATION.....	109
ANVÄNDING .....	110
UNDERHÅLL.....	111

# SISÄLTÖ

FI

OHJEET JA SUOSITUKSET .....	113
MITAT JA OSAT .....	116
ASENNUKSEEN .....	118
KÄYTTÖ .....	119
HUOLTO .....	120

# الفهرس

SA

 
 
ارشادات و اقتراحات .....	122
الخصائص .....	125
التركيب .....	127
الاستخدام .....	128
عملية الصيانة .....	129

## RECOMMENDATIONS AND SUGGESTIONS

- △ The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

### INSTALLATION


- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.  
Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air.  
When the cooker hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.
- In the event of damage to the power cable, it must be replaced by the manufacturer or by the technical service department, in order to prevent any risks.

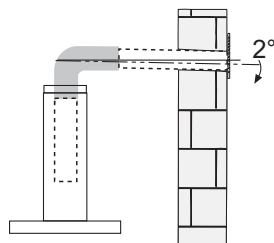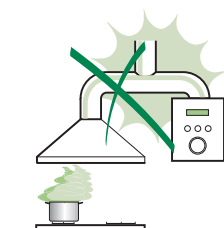

- If the instructions for installation for the gas hob specify a greater distance specified above, this has to be taken into account. Regulations concerning the discharge of air have to be fulfilled.
- Use only screws and small parts in support of the hood.  
**Warning:** Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
- Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.

## USE

 - The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flambè under the range hood; risk of fire.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

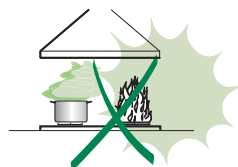


- **“CAUTION:** Accessible parts may become hot when used with cooking appliances.”

## MAINTENANCE

 
- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period (Fire hazard).
- The Grease filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.
- The Activated charcoal filter is not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently for particularly heavy usage.
- "Failure to carry out cleaning as indicated will result in a fire hazard".
- Clean the hood using a damp cloth and a neutral liquid detergent.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# CHARACTERISTICS

## Dimensions

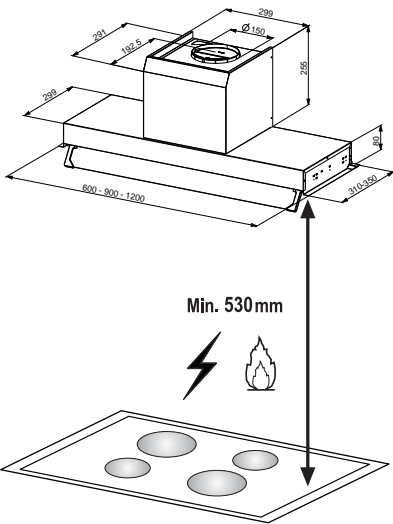


## Components

Ref.	Q.ty	Product Components
1	1	Hood Canopy complete with: Controls, Light, Fan unit, Filters
8	1	Directional Grille ø 125 mm
9	1	Reduction Flange ø 150-120 mm

Ref.	Q.ty	Installation Components
12e	2	Screws 2.9 x 9.5 (Washer under head)

 
Q.ty	Documentation
1	Instruction Manual

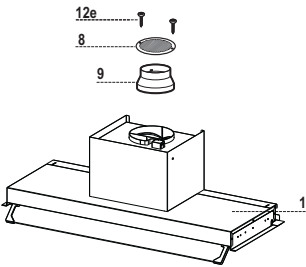



## Fixing the Hood

 - Insert the Hood Canopy into the overhead unit.
- Align the hood canopy with the front bottom edge of the unit (excluding any doors).
- Remove grease filters.
- Screw the hood canopy to the unit from the inside.
- Loosen the screws fixing the spacers and adjust then to the correct position before fastening completely.

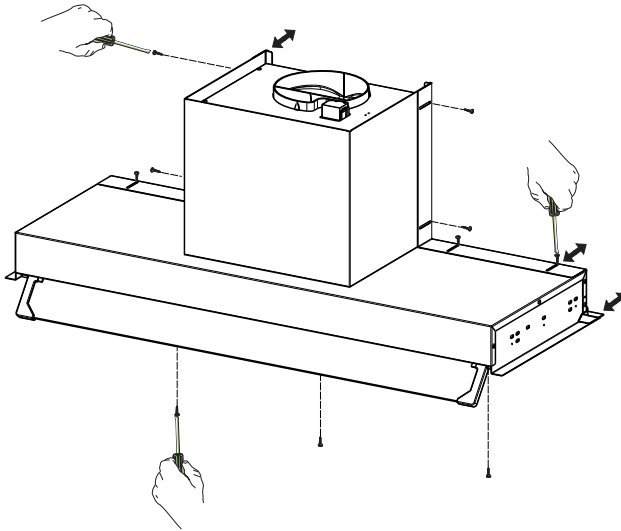

**WARNING:** The Hood Canopy must be fitted into the Unit before it is fixed to the wall.


# INSTALLATION
 
## Connections

### DUCTED VERSION AIR EXHAUST SYSTEM


When installing the ducted version, connect the hood to the chimney using either a flexible or rigid pipe  $\varnothing$  150 or 120 mm, the choice of which is left to the installer.

- To install a  $\varnothing$  120 mm air exhaust connection, insert the reducer flange **9** on the hood body outlet.
- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove possible charcoal filters.

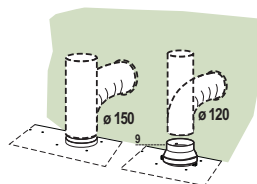


### RECIRCULATION VERSION AIR OUTLET

 - Cut a hole  $\varnothing$  125 mm in any shelf that may be positioned over the hood.
- Insert the reducer flange **9** on the hood body outlet.
- Connect the flange to the outlet on the shelf over the hood by using a flexible or rigid pipe  $\varnothing$  120 mm.
- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Fix the air outlet grid **8** on the recirculation air outlet by using the 2 screws **12e** (2,9 x 9,5) provided.
- Ensure that the activated charcoal filters have been inserted.

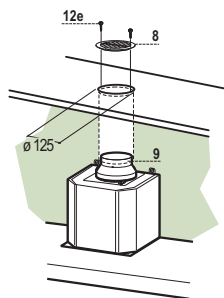


### ELECTRICAL CONNECTION

 - Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.
- Remove the grease filters (see paragraph Maintenance) being sure that the connector of the feeding cable is correctly inserted in the socket placed on the side of the fan.

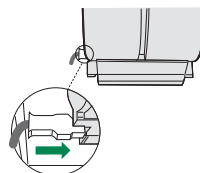

# USE
 
## Controls

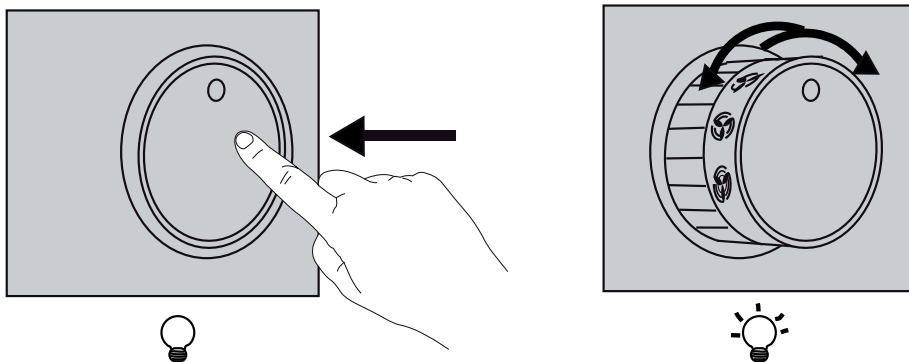

**Lights** – To turn the lights on, press the dial and release it so that it pops out of its housing. To turn the lights off, push the dial back inwards, returning it to the off position


**Motor Speed Adjustment** – Press the dial and release it so that it pops out of its housing, then turn the dial to select one of the available suction speeds.

# MAINTENANCE
 
## Grease filters

### CLEANING METAL SELF- SUPPORTING GREASE FILTERS

- The filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.
- Remove the filters one at a time by pushing them towards the back of the group and pulling down at the same time.
- Wash the filters, taking care not to bend them. Allow them to dry before refitting.
- When refitting the filters, make sure that the handle is visible on the outside.

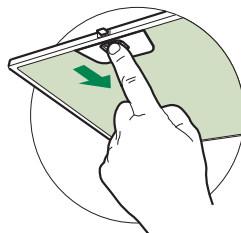


### Activated charcoal filter (Recirculation version)

These filters are not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently with heavy usage.

### REPLACING THE ACTIVATED CHARCOAL FILTER

 - Remove the metal grease filters
- Remove the saturated activated charcoal filter as shown (A).
- Fit the new filters (B).
- Replace the metal grease filters.

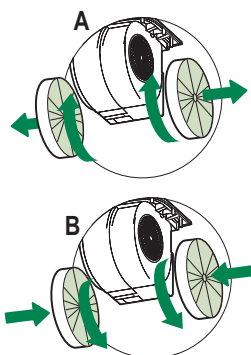 



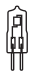




## Lighting

### LIGHT REPLACEMENT
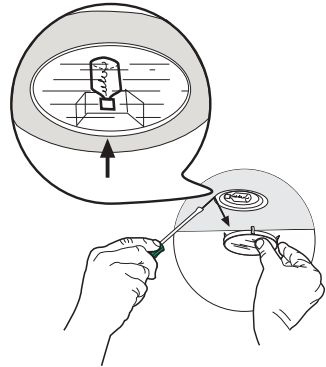
#### 20 W halogen light.

- Remove the snap-on lamp cover by levering it from under the metal ring, supporting it with one hand.
- Remove the halogen lamp from the lamp holder by pulling gently.
- Replace the lamp with a new one of the same type, making sure that you insert the two pins properly into the housings on the lamp holder.
- Replace the snap-on lamp cover.



Lamp	Power (W)	Socket	Voltage (V)	Dimension (mm)	ILCOS Code
	28	E14	220 – 240	104 x 35	HSGSB/C/UB-28-220/240-E14
	20	G4	12	33 x 9	HSG/C/UB-20-12-G4
	35	GU10	230	51 x 50,7	HAGS-35-230-GU10-51/40
	50	GU10	230	51 x 50,7	HAGS-35-230-GU10-51/20
	20	GU4	12	40 x 35	HRGS-20-12-GU4-35/30
	20	GU5.3	12	46 x 51	HRGS-20-12-GU5.3-50/10
	16	G13	95	720 x 26	FD--16/40/1B-E--G13--26/720
	18	G13	57	589,8 x 26	FD--18/40/1B-E--G13--26/600
	9	G23	60 (lamp) 220-240 (starter)	167 x 28	FSD-9/27/1B-I-G23
	11	G23	91 (lamp) 220-240 (starter)	235,8 x 28	FSD-11/40/1B-I-G23