

# Contents

<b>1 Instructions</b>	<b>4</b>
1.1 General safety instructions	4
1.2 Instructions for using microwaves	5
1.3 Manufacturer liability	7
1.4 Appliance purpose	7
1.5 Identification plate	7
1.6 Disposal	7
1.7 This user manual	8
1.8 How to read the user manual	8
<b>2 Description</b>	<b>9</b>
2.1 General Description	9
2.2 Control panel	10
2.3 Other parts	11
2.4 Microwaves	11
2.5 Available accessories	12
<b>3 Use</b>	<b>13</b>
3.1 Instructions	13
3.2 Preliminary operations	15
3.3 Using the accessories	15
3.4 Using the oven	16
3.5 Traditional cooking tips	29
3.6 Special functions	30
3.7 Preset programs	40
3.8 Personal recipes	49
3.9 Settings	55
<b>4 Cleaning and maintenance</b>	<b>61</b>
4.1 Instructions	61
4.2 Cleaning the surfaces	61
4.3 Cleaning the door glazing	62
4.4 Cleaning the oven cavity	62
4.5 Vapour Clean	64
<b>5 Installation</b>	<b>68</b>
5.1 Electrical connection	68
5.2 Positioning	69

## TRANSLATION OF THE ORIGINAL INSTRUCTIONS

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: [www.smeg.com](http://www.smeg.com)



# Instructions

## 1 Instructions

### IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY AND RETAIN FOR FUTURE USE.

#### 1.1 General safety instructions

##### Risk of personal injury

- **WARNING:** If the door or the door seal is damaged, the oven must not be used until it has been repaired by authorised persons.
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which offers protection against exposure to microwave energy.
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- **WARNING:** During use the appliance and its accessible parts become very hot.
- Never touch the heating elements during use.
- Keep children under eight years of age at a safe distance if they are not constantly supervised.
- This appliance may be used by children aged at least 8 and by people of reduced physical or mental capacity, or lacking in experience in the use of electrical appliances, as long as they are supervised or instructed by adults who are responsible for their safety.
- Children must never play with the appliance.
- The appliance must never be cleaned by unsupervised children.
- Switch off the appliance immediately after use.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Never attempt to extinguish a flame or fire with water.
- Have authorised persons carry out installation and assistance interventions according to the standards in force.
- Do not modify this appliance.
- Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance.



- Do not try to repair the appliance yourself or without the intervention of authorised persons.
- If the power supply cable is damaged, contact technical support immediately and they will replace it.

## Risk of damaging the appliance

- Do not use abrasive or corrosive detergents on glass parts (e.g. powder products, stain removers and metallic sponges).
- Use wooden or plastic utensils.
- Do not use steam jets to clean the appliance.
- Do not obstruct ventilation openings and heat dispersal slots.
- Never leave the appliance unattended during cooking operations where fats or oils could be released.
- Do not use the appliance to heat rooms for any reason.
- Do not rest any weight or sit on the open door of the appliance.
- Take care that no objects are stuck in the doors.

## 1.2 Instructions for using microwaves

- Check the appliance visually during the cooking of foods in plastic or paper containers.



Improper use  
Danger of explosion



- When using the microwave to heat or reheat liquids, the boiling process may be delayed – boiling temperature can be reached without the formation of the usual "rolling boil". This delayed boiling and consequent superheating of the liquid can generate an explosion inside the appliance, or sudden boiling over of the superheated liquid can occur when removing the container from the appliance. To avoid these dangers, it is necessary to insert the supplied boiling rod (or a heat-resistant plastic spoon) in the container while heating.
- Use the microwave only for the preparation of food for consumption. Other types of applications are strictly forbidden



## Instructions

- (e.g. drying clothes, warming slippers, sponges, wet cloths or the like, dehydrating foods) because they can lead to the risk of injury or fire.
- Clean the appliance constantly and remove any food residue.
  - Do not use the microwave to dry food.
  - Do not use the microwave to heat oils or fry.
  - Do not use the appliance to heat foods or beverages containing alcohol.
  - Baby food should not be heated in sealed containers. Remove the cover or the teat (in the case of baby bottles). Always check the preparation's temperature once heating has completed, it should not be too high. For an even temperature and to avoid scalding stir or shake the contents.
  - Do not heat eggs in their shells or whole hard boiled eggs; they may explode even after the heating process has completed.
  - Before cooking food with a hard skin or peel (e.g. potatoes, apples, etc.) it is necessary to puncture the skin.
  - Do not heat food contained within food packages.
  - Do not use the microwave functions when the oven is empty.
  - Use cookware and utensils that are suitable for use in a microwave oven.
  - Do not use aluminium containers to cook food.
  - Do not use dishes with metallic decorations (gold-plated or silver).
  - The appliance operates in the 2.4GHz ISM band.
  - In compliance with the provisions relating to electromagnetic compatibility the appliance belongs to group 2 and class B (EN 55011).
  - This appliance complies with the standards and directives currently in force concerning safety and electromagnetic compatibility. It is however recommended for pacemaker wearers to maintain a minimum distance of 20-30cm between the microwave when it is operating and the pacemaker. Consult the pacemaker manufacturer for more information.



## 1.3 Manufacturer liability

The manufacturer declines all liability for damage to persons or property caused by:

- Use of the appliance other than the one envisaged;
- Non-observance of the user manual provisions;
- Tampering with any part of the appliance;
- Use of non-original spare parts.

## 1.4 Appliance purpose

- This appliance is intended for cooking food in the home environment. Every other use is considered inappropriate. Moreover, it cannot be used:
  - in employee kitchens, shops, offices and other working environments.
  - in farms/agritourism establishments.
  - by guests in hotels, motels and residential environments.
  - in bed and breakfast establishments.
- The appliance is not designed to operate with external timers or with remote-control systems.

## 1.5 Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

## 1.6 Disposal



This appliance must be disposed of separately from other waste (Directives 2002/95/EC, 2002/96/EC, 2003/108/EC). The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.



### Power voltage Danger of electrocution

- Disconnect the main power supply.
- Disconnect the power cable from the electrical system.

To dispose of the appliance:

- Cut the power supply cable and remove it along with the plug (if present).
- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.

Our appliances are packed in non-polluting and recyclable materials.

- Deliver the packing materials to the appropriate recycling centre.



### Plastic packaging Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the packaging plastic bags.



## Instructions

### 1.7 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

- Read this user manual carefully before using the appliance.

### 1.8 How to read the user manual

This user manual uses the following reading conventions:

#### Instructions



General information on this user manual, on safety and final disposal.

#### Description



Description of the appliance and its accessories.

#### Use



Information on the use of the appliance and its accessories, cooking advice.

#### Cleaning and maintenance



Information for proper cleaning and maintenance of the appliance.

#### Installation



Information for authorised persons: Installation, operation and inspection.



Safety instructions



Information



Advice

1. Sequence of instructions for use.




- Standalone instruction.



## 2 Description

### 2.1 General Description

NE

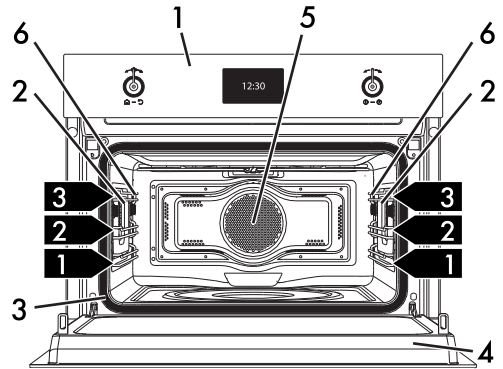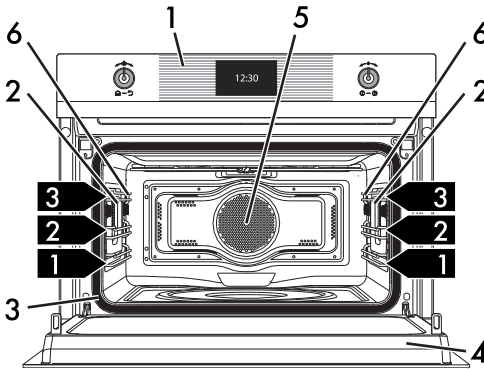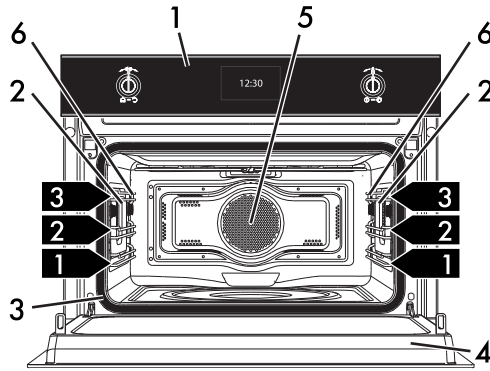

1 Control panel

2 LH light

3 Seal

4 Door

5 Fan


6 Rack/tray support frames

**1,2,3** Frame shelf



## Description

### 2.2 Control panel

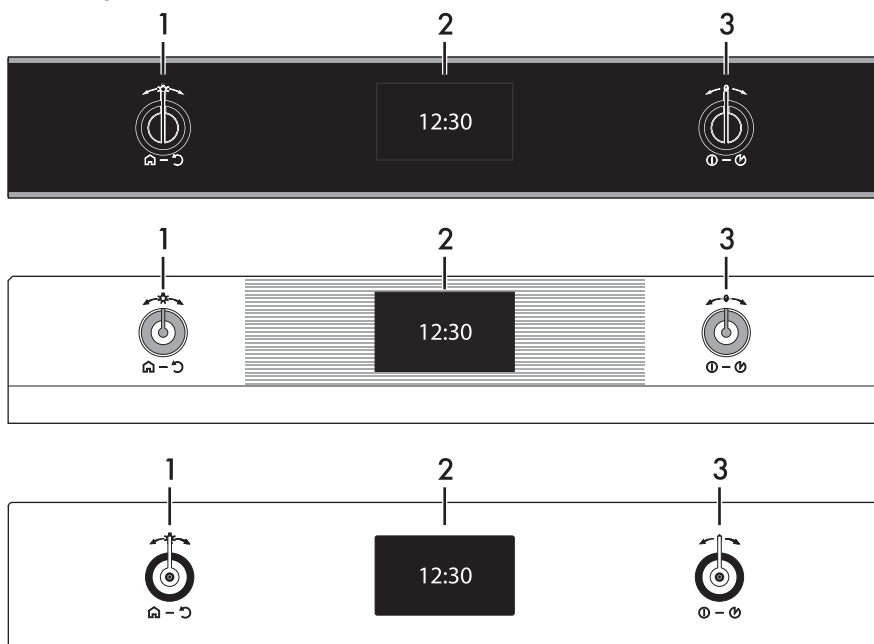

#### 1 Return knob

Using this knob you can return to the appliance's previous menu item. It also allows you to turn the oven light on and off manually.

#### 2 Display

Displays the current time, the cooking parameters, and all the appliance's functions.

#### 3 Control knob

This knob allows you to turn the appliance on and off and select the various available functions.

Turn the knob right or left to change/select the required item. Press to confirm.




Keep the knob pressed in for at least 5 seconds to immediately complete any cooking program.





## 2.3 Other parts

### Cooling fan

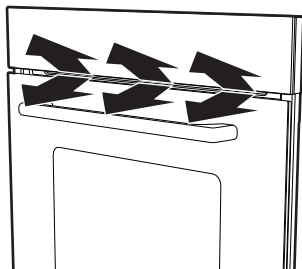



The fan cools the appliance and comes into operation during cooking.

The fan causes a steady outflow of air from above the door which may continue for a brief period of time even after the appliance has been turned off.

### Interior lighting

The appliance's interior lighting comes on:

- When the door is opened
- When any function is selected, apart from the Sabbath mode  and the Vapour Clean  function.
- Turning the return knob to the right or left when no function is selected (turn the temperature knob to the right or left again to switch off the internal lighting).



In order to save energy, the light turns off after a minute at the start of cooking (this function can be deactivated via the secondary menu).



When the door is open, it is not possible to turn off the interior lighting (on some models only).

### Shelves

The appliance features shelves to position trays and racks at different heights. The insertion heights are indicated from the bottom upwards (see 2.1 General Description).

## 2.4 Microwaves

The appliance is equipped with a microwave generator called a magnetron. The microwaves generated are evenly emitted into the oven cavity in order to reach the food and heat it.

Heating takes place through the process of friction between the molecules contained within the food (mainly water molecules), with the consequent generation of heat.

The heat generated directly inside the food leads to defrosting, re-heating or cooking in a shorter length of time compared to traditional cooking.

The use of suitable containers for microwave cooking allows the microwaves to reach the food in a uniform manner (see Materials suitable for microwaves).




## Description

### 2.5 Available accessories




Some models are not provided with all accessories.

#### Rack

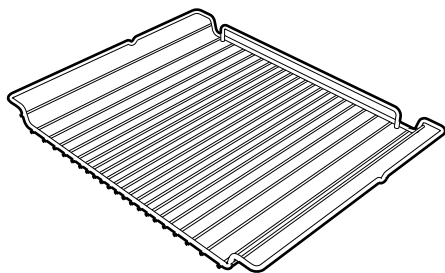


Useful for supporting containers with food during cooking.

#### Glass dish

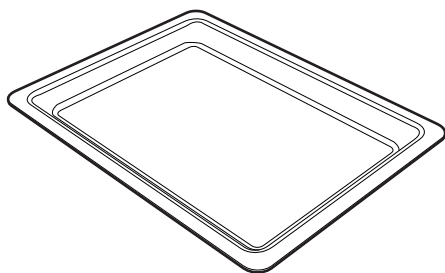

Useful for any type of cooking and collecting fat from foods resting on the rack above.

#### Tray rack

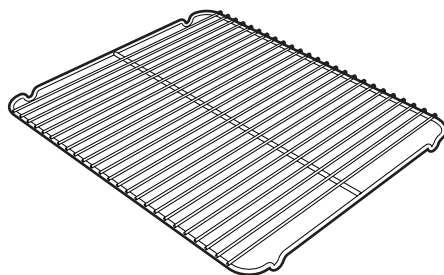

To be placed over the glass dish; for cooking foods which may drip.

#### Boiling rod



To be placed in containers when heating liquids, necessary to avoid delayed boiling with resulting superheating.



The oven accessories that may come into contact with food are made of materials that comply with the provisions of current legislation.



Original supplied and optional accessories can be requested to Authorised Assistance Centres. Use only original accessories supplied by the manufacturer.



## 3 Use

### 3.1 Instructions



**High temperature inside the oven cavity during use**  
**Danger of burns**

- Keep the oven door closed during cooking.
- Protect your hands by wearing heat resistant gloves when handling food inside the oven cavity.
- Do not touch the heating elements inside the oven cavity.
- Do not pour water directly onto very hot trays.
- Do not allow children to get close to the appliance when it is in operation.



**Improper use**  
**Risk of damage to surfaces**

- Do not cover the bottom of the oven cavity with aluminium or tin foil sheets.
- If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven cavity.
- Do not bang or drag kitchenware over the glazed bottom of the oven compartment.
- Do not pour water directly onto very hot trays.



**High temperature inside the oven cavity during use**  
**Danger of fire or explosion**

- Do not spray any spray products near the appliance.
- Do not use or leave flammable materials near the appliance.
- Do not use plastic kitchenware for cooking food (except with the microwave function).
- Do not put sealed tins or containers in the oven cavity.
- Do not leave the appliance unattended during cooking operations in which fats or oils could be released.
- Remove all trays and racks that are not required during cooking.



## Use

### Materials suitable for microwaves

In general, in order for all of the food to be reached, the materials used for microwave cooking must be transparent to microwave energy.

Below is a table of materials to use and those not to use:

#### MATERIALS TO USE

##### Glass\*

- Baking dishes
- Glasses
- Glass jars

Always remove the covers.

##### Porcelain

##### Ceramic

##### Plastic\*

- Containers
- Plastic wrap

Only where suitable for microwave use.

Where film is used it must not come into contact with the food.

\*only if heat-resistant

#### NOT TO BE USED

##### Metal

- Aluminium foil
- Aluminium trays
- Plates
- Metal utensils
- Freezer bags ties

These can lead to arcing or sparks.

##### Wood

##### Crystal glasses

##### Paper

Risk of fire.

##### Expanded polystyrene containers

Risk of food contamination.

\*only if heat-resistant



Dishes must be free of metal decorations.

### Testing dishes



The microwave function can be used without any food inside the oven only for this test.

To check whether or not kitchenware is suitable for use with microwave cooking carry out this simple test:

1. Remove all accessories from the oven cavity.
2. Place the cookware to be tested into the oven compartment.
3. Select the maximum power level (e.g. 1000W).
4. Set a cooking time of 30 seconds.
5. Start cooking.




### Unsuitable kitchenware Risk of damage to the appliance

- If there is crackling or if sparks are emitted from the kitchenware then immediately terminate the test. In this instance the kitchenware is not suitable for microwave cooking.
6. At the end of the test the kitchenware must be either cold or slightly warm. If the kitchenware is hot then it should be considered as unsuitable for microwave use.



## 3.2 Preliminary operations

1. Remove any protective film from the outside or inside of the appliance, including accessories.
2. Remove any labels (apart from the technical data plate) from the accessories and from the oven cavity.
3. Remove and wash all the appliance accessories (see 4 Cleaning and maintenance).
4. Heat the empty oven at maximum temperature, using the traditional cooking functions for at least 20 minutes so as to remove any manufacturing residues (see "Traditional cooking functions").
5. You need to set the current time in order to start using the appliance (see "First use").

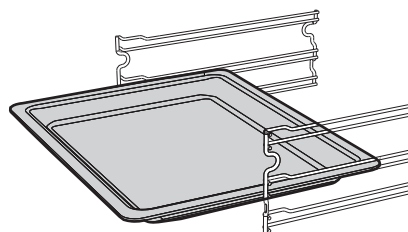

**High temperature  
Danger of burns**

- When using any of the microwave functions the rack can become very hot. Use heat-resistant gloves for handling.



Gently insert the racks and trays as far as they will go into the oven cavity.




Clean the trays before using them for the first time to remove any residues left by the manufacturing process.

## 3.3 Using the accessories

### Racks and trays


Racks and trays have to be inserted into the side guides until they come to a complete stop.

- The mechanical safety locks that prevent the rack from being removed accidentally must face downwards and towards the back of the oven cavity.

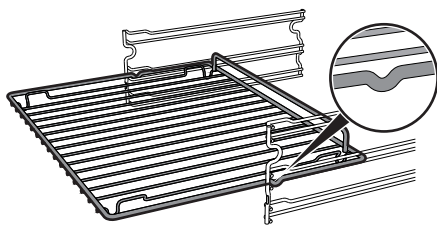

### Tray rack

The tray rack has to be inserted into the tray. In this way fat can be collected separately from the food which is being cooked.

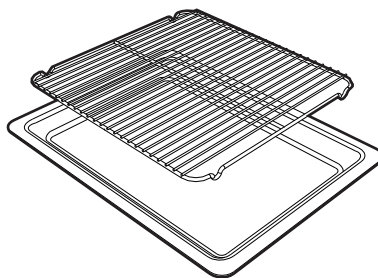



## Use

### Boiling rod

When using the microwave to heat or reheat liquids, the boiling process may be delayed while the liquids nevertheless exceed 100 degrees. To avoid this dangerous phenomenon, it is necessary to insert the supplied boiling rod (or a heat-resistant plastic spoon) in the container while heating.



#### Improper use Danger of explosion/burns

- To avoid the risk of explosion inside the appliance or the sudden boiling over of superheated liquids, always immerse the boiling rod in the liquid that is being heated.



#### High temperature Risk of damage to the accessory

- Use the boiling rod only with Microwave functions. The rod must not be used with combined and traditional functions.

### 3.4 Using the oven

#### First use

12:30

On the first use, or after a power failure, **00:00** will flash on the appliance's display. In order to be able to start any cooking program, the current time must be set (if the oven is being turned on for the first time, it is also recommended you set the required language).

Press the control knob to enter the settings menu.



The appliance language is set to "English" by default.



When first connecting or after the power has been cut for a time it will be necessary to wait a few seconds before you can interact with the appliance.





## Microwave functions



For microwave cooking, the food must be placed in a container resting on the rack inserted in the first runner.

IT IS NOT RECOMMENDED TO COOK FOOD IN A CONTAINER RESTING ON THE BOTTOM OF THE OVEN.

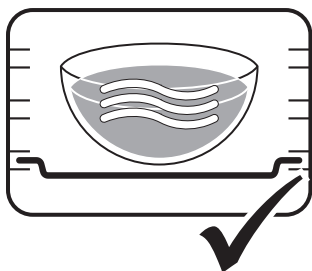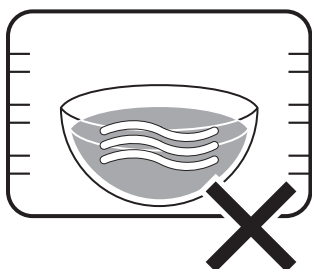

For perfect results with long microwave and combination cooking functions, food should be stirred once or twice during cooking.

1. Press the control knob to activate the appliance.
2. From the main menu, turn the control knob to select "cooking functions".
3. Select "cooking functions" from the menu by pressing the control knob.

### menu

cooking functions  
special functions  
preset programs  
personal recipes  
settings

4. Turn the control knob to select the required function.

### cooking functions

microwave  
microwave+grill  
microwave+static+fan  
microwave+fan forced  
ECO




When cooking using only the microwave function, the appliance does not perform preheating. The food can be placed immediately inside the appliance.




## Use


5. Press the control knob to confirm the selection.

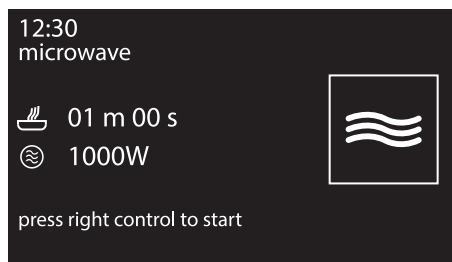


10. Press the control knob again to start microwave cooking.

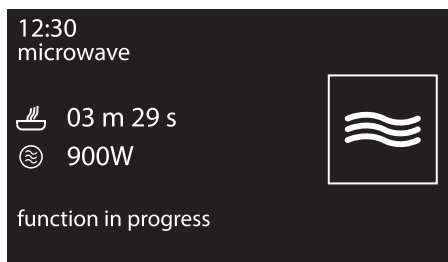

6. Turn the control knob to modify the cooking duration.

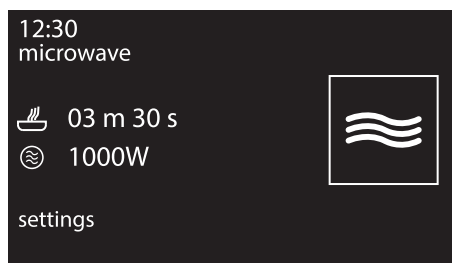


11. At the end of the cooking cycle, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing one of the two knobs or by opening the door.

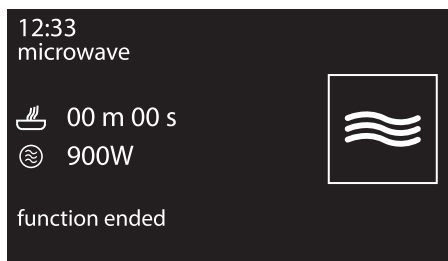

7. Press to confirm the set cooking duration.

8. Turn the control knob to change the microwave power level (from 100W to 1000W).

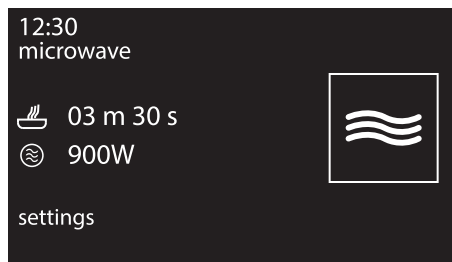

9. Press to confirm the set cooking duration.





## Microwave power levels

Below is a list of the power levels that can be selected:

Power (W)	Useful for
100	Defrosting food
200	
300	
400	Cooking meat or delicate cooking
500	
600	
700	Re-heating and cooking food
800	
900	
1000	Heating liquids

## QUICK START microwave function



The QUICK START function allows the microwave to be started quickly. This is useful for heating small quantities of liquid or food.

1. Press the return knob with the appliance in stand-by.
2. Press the control knob to confirm the QUICK START function.

12:30  
microwave



01 m 00 s



1000W



press right control to start

## Combined functions



Combination cooking is a mix of traditional cooking and microwave operation.

## Combination functions list



Improper use

**Risk of damage to the appliance**

- Do not use the combined functions to heat or boil liquids.



### Microwave + Grill

The use of the grill results in perfect browning of the food's surface. Using the microwave on the other hand leads to rapid internal cooking of the food.



### Microwave + Static + Fan

The operation of the fan, combined with traditional cooking, ensures consistent cooking even with complex recipes. Using the microwave on the other hand leads to rapid internal cooking of the food.



### Microwave + Fan forced


For combination cooking of food in a short time thanks to the microwave action working together with hot air circulation.

The appliance will start the microwave oven with the default settings.




## Use


1. Press the control knob to activate the appliance.
2. From the main menu, turn the control knob to select "cooking functions".
3. Press the control knob to confirm the selection.

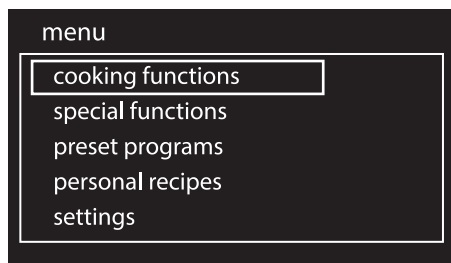

4. Turn the control knob to select a "combined" function.

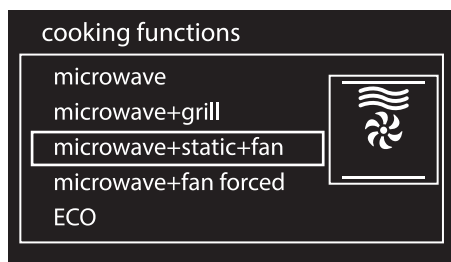


5. Press the control knob to confirm the selected function. The display shows the screen for setting the parameters of the selected combined function.

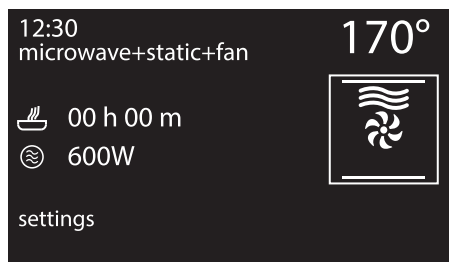


**i** With the combination microwave+grill function, the oven is not preheated because of the type of cooking and to allow cooking to be carried out more quickly.

6. Turn the control knob to modify the cooking temperature.
7. Press the control knob to confirm the cooking temperature set (for example 200°C).

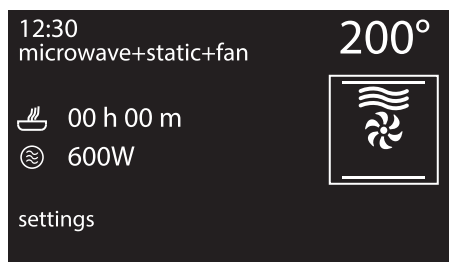




8. Turn the control knob to modify the cooking duration.
9. Press the control knob to confirm the cooking time set (for example 15 minutes).

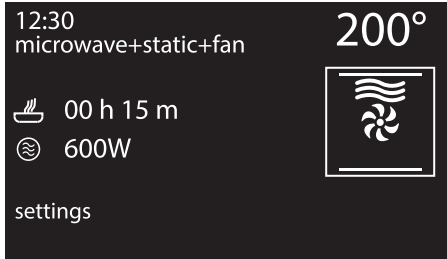


10. Turn the control knob to change the microwave power level (from 100W to 600W).
11. Press the control knob to confirm the microwave power level (for example 500W).

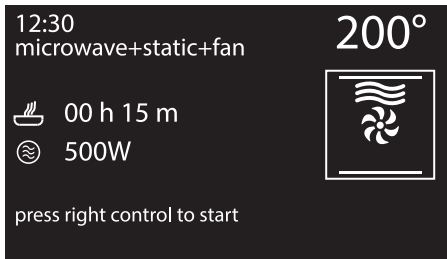

12. Press the control knob again to start the set combined cooking.

13. The appliance will begin preheating. The display will show the chosen function, the pre-set temperature, the current time and the progress bar of the temperature reached (preheating).

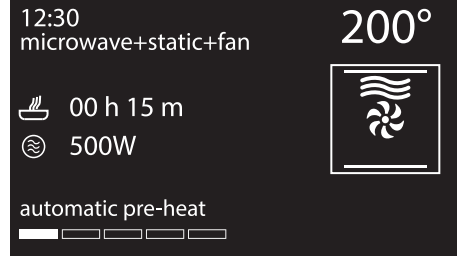

With the combination Microwave + Grill function, the oven is not preheated because of the type of cooking and to allow cooking to be carried out more quickly.




Turn the control knob to change the preset temperature. Press to confirm or wait 5 seconds.




## Use

14. When the preheating stage is over a buzzer will sound to indicate that the food can be placed inside the oven.

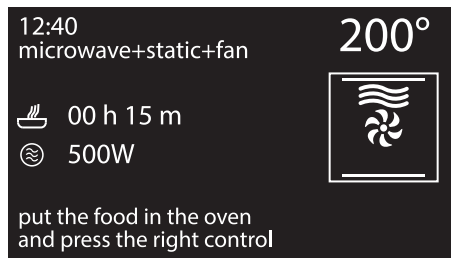


15. After placing the food in the oven, press the control knob to start cooking.

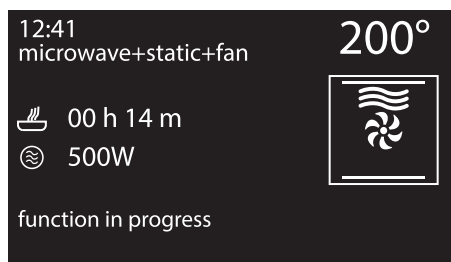


Cooking can be interrupted at any time by pressing and holding the control knob for a few seconds.

### Traditional cooking functions

1. Press the control knob to activate the appliance.
2. From the main menu, turn the control knob to select "cooking functions".
3. Press the control knob to confirm the selection.

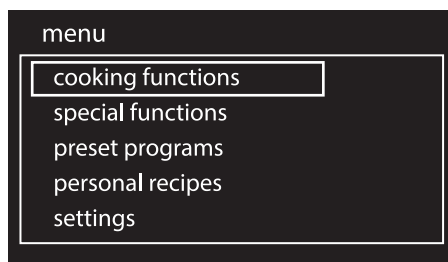


4. Turn the control knob to select a "traditional" function.
5. Press the control knob to confirm the selection.

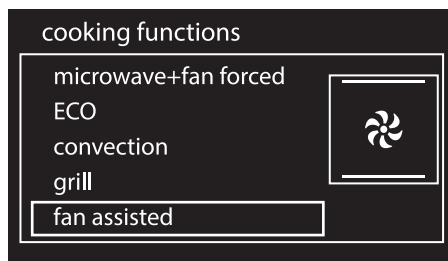



6. The appliance will begin preheating. The display will show the chosen function, the pre-set temperature, the current time and the progress bar of the temperature reached (preheating).

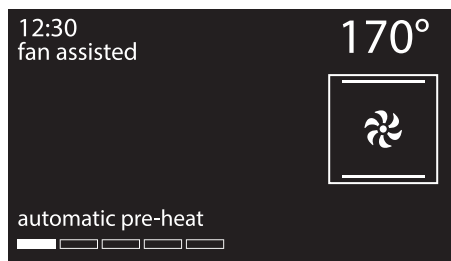

Turn the control knob to change the preset temperature. Press to confirm or wait 5 seconds.

7. When the preheating stage has been completed, a buzzer will sound to indicate that the food can be placed in the oven cavity and cooking will start automatically.



To extend the cooking time manually, press the control knob again. The appliance will resume its normal operation with the previously selected cooking settings.




For safety reasons, it is not possible to set the cooking end time by itself without setting the cooking duration.

### Interrupting a function

To interrupt a cooking function:

1. Press the return knob.
2. Select the required option
3. Press the return knob to confirm.

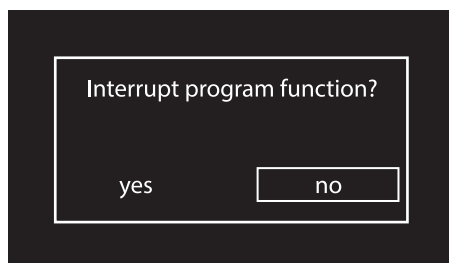

Keep the control knob pressed in for at least 5 seconds to immediately interrupt the cooking cycle at any time and return to the main menu.



## Traditional functions list



### Fan forced

The combination of the fan and the circular heating element (incorporated in the rear of the oven cavity) allows you to cook different foods on several levels, as long as they require the same temperatures and type of cooking. Hot air circulation ensures instant and even distribution of heat. It will be possible, for instance, to cook fish, vegetables and biscuits simultaneously (on different levels) without odours and flavours mingling.



### Grill

The heat coming from the grill element gives perfect grilling results above all for thin and medium thickness meat and, in combination with the rotisserie (where fitted), gives the food an even browning at the end of cooking. Ideal for grilled cheese and gratinating. This function enables large quantities of food, particularly meat, to be grilled evenly.



### Eco

This function is particularly suitable for cooking on a single shelf with low power consumption.

Ideal when cooking meat, fish and vegetables. It is not recommended for foods that require proving.

To obtain maximum energy savings and reduce cooking times, it is recommended to place food in the oven without preheating the oven cavity.



When using the ECO function, avoid opening the door during cooking.



Cooking (and preheating) times are longer with the ECO function.



### Convection

As the heat comes from above and below at the same time, this system is particularly suitable for certain types of food. Traditional cooking, also known as static cooking, is suitable for cooking just one dish at a time. Ideal for pies, bread and casseroles. It is also suitable for fatty meat such as duck and goose.



### Fan assisted

The operation of the fan, combined with traditional cooking, ensures consistent cooking even with complex recipes. Perfect for roasts.



### Fan grill

The air produced by the fan softens the strong heatwave generated by the grill, perfectly grilling even very thick cuts of meat such as steaks, pork chops etc.



### Baker's function

The combination of the fan with just the bottom heating element allows cooking to be completed more rapidly. This system is recommended for sterilising or for finishing off the cooking of foods which are already well-cooked on the surface, but not inside, which therefore need a little more heat. Perfect for any type of food.



### Supercook


The combination of fan assisted cooking and traditional cooking allows different foods to be cooked on several levels extremely quickly and efficiently, without odours and flavours mingling. Perfect for large volumes that call for intense cooking.

To obtain a rotisserie effect, set the temperature to maximum. When the appliance reaches maximum temperature, return the temperature to normal. This procedure seals the liquids inside the meat, and reduces shrinkage.


## Timer during function



This function only activates the buzzer, without stopping cooking.

1. Press the control knob during a cooking function.
2. Turn the control knob right or left to set the duration (from 1 minute to 4 hours). After a few seconds, the  symbol stops flashing and the countdown starts.



3. Wait for the buzzer to indicate that the time has finished. The  symbol flashes.



Turn the knob to the left or right to select another timer, or press the control knob to stop the buzzer.



## Use

### Timed cooking




Timed cooking is the function which allows a cooking operation to be started and then ended after a specific length of time set by the user.



Activation of timed cooking cancels any minute minder timer which may previously have been set.

1. After selecting a cooking function and temperature, press the control knob twice.
2. Turn the knob right or left to set the minutes of cooking from 00:01 to 13:00. Keep the knob turned to produce a faster increase or decrease.


12:39  
fan assisted

 00 h 00 m


170°



duration

3. A few seconds after the required duration is set, the  symbol stops flashing and timed cooking starts.

12:40  
fan assisted

 00 h 30 m


170°



function in progress

4. At the end of the cooking cycle, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing one of the two knobs or by opening the door.

13:10  
fan assisted

 00 h 00 m

170°



function ended





Turn the control knob to add some minutes of cooking time.





To extend the cooking time manually, press the control knob again. The appliance will resume its normal operation with the previously selected cooking settings.



To turn off the appliance see "Interrupting a function".

## Modifying the data set during timed cooking

During operation, it is possible to modify timed cooking duration:

1. When the  symbol is steady and the appliance is in the cooking phase, press the control knob. The  symbol will start flashing.
2. Turn the control knob right or left to alter the preset cooking time.



## Delayed cooking



Delayed cooking is the function which allows a cooking operation to be stopped at an established time depending on the time set by the user, after which the oven will switch off automatically.



1. After selecting a function and a cooking temperature, press the control knob to set the cooking time.




2. Press the control knob before the  symbol stops flashing to set the end of cooking time.
3. The  symbol flashes. Turn the knob right or left to set the cooking end time.




## Use


4. After a few seconds the  and  symbols stop flashing. The appliance waits for the delay start time.

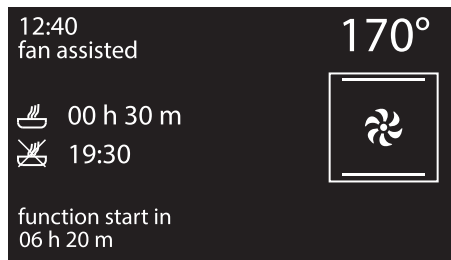


5. Based on the values set, the appliance will start a preheating stage of approximately 10 minutes.

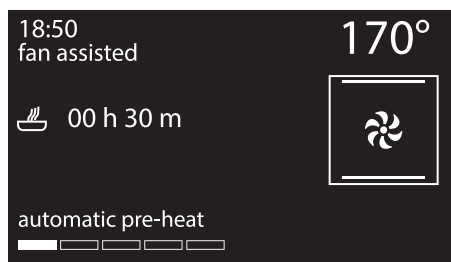

6. It will then proceed with the selected function.

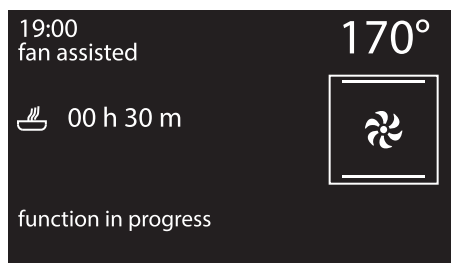

7. At the end of the cooking cycle, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing one of the two knobs or by opening the door.

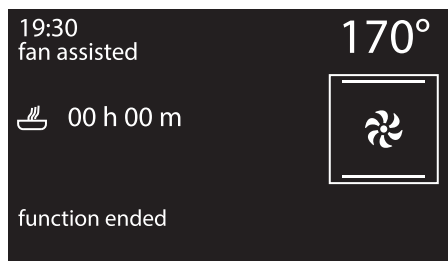

To extend the cooking time manually, press the control knob again. The appliance will resume its normal operation with the previously selected cooking settings.



For safety reasons, it is not possible to set the end of cooking time by itself without having set its duration.










## Modifying the data set during programmed cooking



After modifying the cooking duration, the end of cooking time must be re-set.

During operation, it is possible to modify programmed cooking duration:

1. When the  and  symbols are lit steadily and the appliance is waiting for cooking to start, press the control knob. The  symbol will start flashing.
2. Turn the control knob to alter the previously set cooking time.
3. Press the control knob again. The  symbol switches off and  starts flashing. The display shows the cooking end time.
4. Turn the control knob to delay the cooking end time.
5. After a few seconds, the  and  symbols stop flashing and programmed cooking resumes with the new settings.



If the cooking duration is modified, the cooking end time is deleted.

## 3.5 Traditional cooking tips

### General advice

- Use a fan assisted function to achieve consistent cooking at several levels.
- It is not possible to shorten cooking times by increasing the temperature (the food could be overcooked on the outside and undercooked on the inside).

### Advice for cooking meat

- Cooking times vary according to the thickness and quality of the food and to consumer taste.
- Use a meat thermometer when roasting meat, or simply press on the roast with a spoon. If it is hard, it is ready; if not, it needs another few minutes cooking.

### Advice for cooking with the Grill and the Fan grill

- Meat can be grilled even when it is put into the cold oven or into the preheated oven if you wish to change the effect of the cooking.
- With the Fan grill function, we recommend that you preheat the oven cavity before grilling.
- We recommend placing the food at the centre of the rack.



## Advice for cooking desserts/pastries and biscuits

- Use dark metal moulds: They help to absorb the heat better.
- The temperature and the cooking time depend on the quality and consistency of the dough.
- To check whether the dessert is cooked right through: At the end of the cooking time, put a toothpick into the highest point of the dessert. If the dough does not stick to the toothpick, the dessert is cooked.
- If the dessert collapses when it comes out of the oven, on the next occasion reduce the set temperature by about 10°C, selecting a longer cooking time if necessary.

## To save energy

- Stop cooking a few minutes before the time normally used. Cooking will continue for the remaining minutes with the heat which has accumulated inside the oven.
- Reduce any opening of the door to a minimum to avoid heat dispersal.
- Keep the inside of the appliance clean at all times.

## 3.6 Special functions



Some functions such as the oven off timer, defrost or cleaning functions are grouped in the special functions menu.

1. On the clock screen, press the control knob to access the main menu.
2. Turn the control knob to the right or left to select **special functions** from the main menu.
3. Press the control knob to confirm.

### menu

cooking functions

**special functions**

preset programs

personal recipes

settings



## List of special functions



### Timer

This function sounds a buzzer when the time set has elapsed.



### Defrost by weight

This function defrosts foods on the basis of the type and weight of the frozen product.



### Defrost by time

This function allows you to defrost food on the basis of a selectable time.



### Proving

The proving function, using the heat coming from the top, makes it possible to prove all types of dough, guaranteeing perfect results quickly.



### Reheat

This function allows you to reheat previously cooked food kept cool or in the refrigerator.



### Sabbath mode

This function allows food to be cooked in accordance with the provisions of the Jewish religion day of rest.



### Vapour Clean

This function facilitates cleaning using the steam produced by a small quantity of water poured onto the bottom of the oven.

For the special functions

### Vapour Clean




see section "Cleaning and maintenance" of this manual




## Use


### Timer


1. Turn the control knob to the right or left to select **timer** from the "special functions" menu.
2. Press the control knob to confirm.

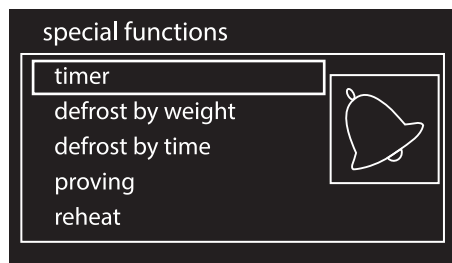

3. Turn the control knob right or left to set the duration (from 1 minute to 4 hours). After a few seconds, the  symbol stops flashing and the countdown starts.



4. If you leave the timer setting screen, the  symbol will be displayed at the top left, indicating that a timer is active.

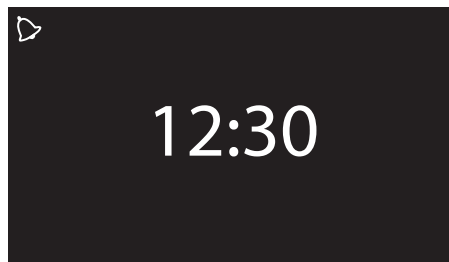

You must return the counter to zero to remove the special timer.



If a function is activated after setting a minute minder time, this time will be automatically used as a timer for the function, except for some special functions, automatic programs and personal recipes.




This function only activates the buzzer, without stopping cooking.




## Defrost by weight

1. Place the food inside the appliance.
2. Turn the control knob to the right or left to select **defrost by weight** from the "special functions" menu.
3. Press the control knob to confirm.

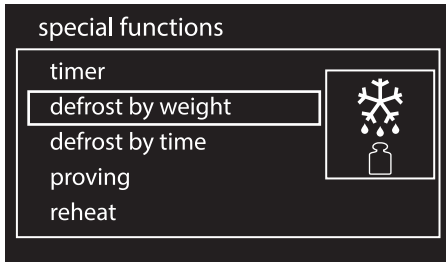


4. Turn the control knob to select the type of food to defrost.

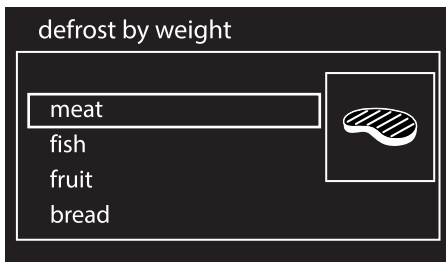

5. Turn the control knob to select the weight (in kilograms) of the food to defrost.



6. Press the control knob to confirm the set parameters.

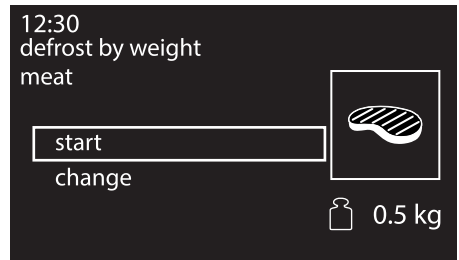

7. Press the control knob to start defrosting, or select change to further modify the set parameters.









## Use

8. At the end, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing or turning one of the two knobs or by opening the door.




Pre-set parameters:

Type	Weight (kg)	Time (default)
	Meat 0.1 to 1.1 (default 0.5)	20 m 00 s
	Fish 0.1 to 0.7 (default 0.4)	17 m 00 s
	Fruit 0.1 to 0.5 (default 0.3)	15 m 00 s
	Bread 0.1 to 0.5 (default 0.3)	05 m 00 s


\* Defrosting times may vary on the basis of the shape and size of the food to be defrosted.

## Defrost by time

1. Place the food inside the appliance.
2. Turn the control knob to the right or left to select **defrost by time** from the "special functions" menu.
3. Press the control knob to confirm.

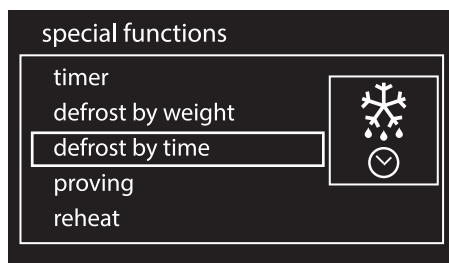


4. Turn the control knob to adjust the value (from 1 minute to 13 hours).

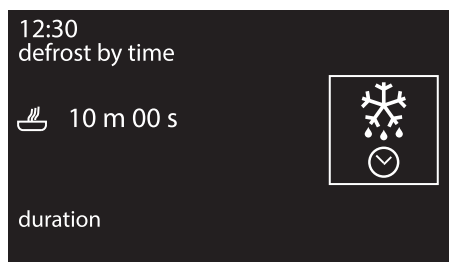






5. Press the control knob to confirm the set parameters.

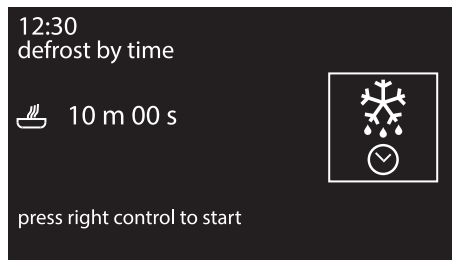

6. Press it again to start defrosting.
7. While the function is in progress, it is possible to further modify the defrosting duration. Turn the control knob to the right or left to make the required changes.
8. Press the control knob to confirm the new defrosting duration set. In any event, the defrosting will automatically resume 5 seconds from the last modification.

9. At the end, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing or turning one of the two knobs or by opening the door.

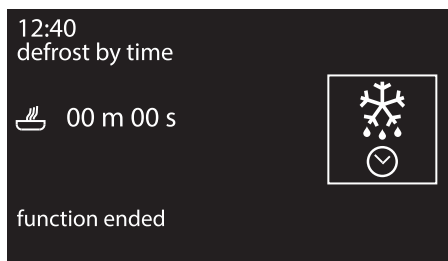




## "Turn" procedure


For best defrosting results it is recommended, when necessary, to turn the dish inside the oven compartment.

1. Put the food in the oven, placing it parallel to the door.

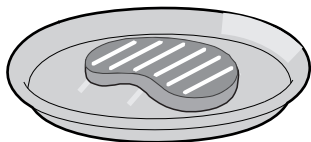


2. When the instruction "**open door and rotate dish**" is displayed, it is necessary to turn the dish.

3. Open the door and turn the dish 90°.

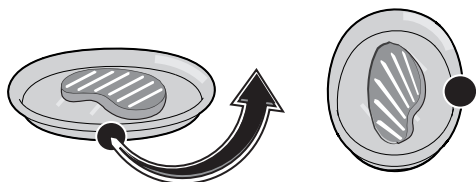

4. Close the door and press the control knob to resume operation.
5. If necessary the appliance will again ask for rotation of the dish. The display will show the instruction "**open door and rotate dish**".
6. For the second rotation the door will need to be opened and the dish turned by 180°.

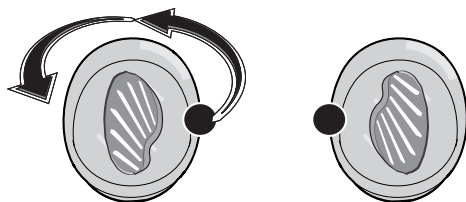

7. Close the door and press the control knob to resume operation.



If dish rotation is not performed the appliance will wait for one minute and then automatically continue defrosting.




## Proving




For successful proving, a container of water should be placed on the bottom of the oven cavity.


1. Position the dough to prove on the second level.
2. Turn the control knob to the right or left to select **proving** from the “special functions” menu.
3. Press the control knob to confirm.

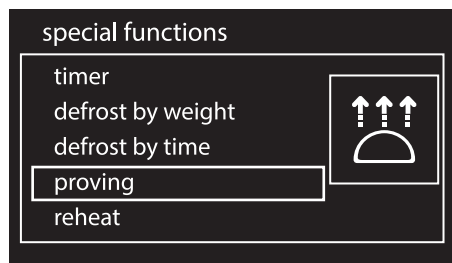


4. Press the control knob to start the function.

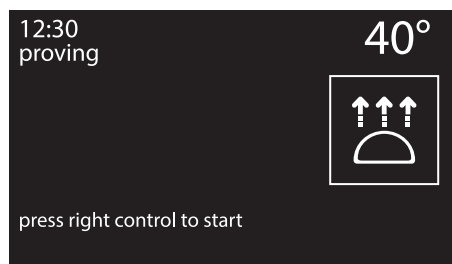

5. The appliance will begin preheating.

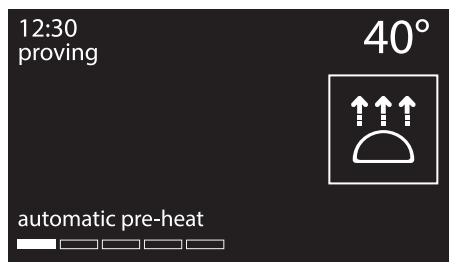

6. It will then proceed with the selected function.

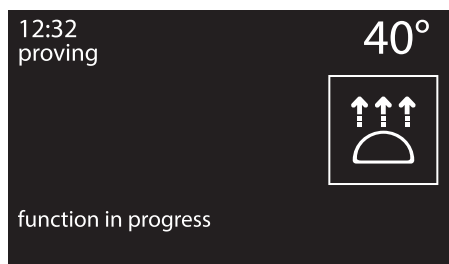

While the function is in progress, it is possible to set a timer for a maximum of 4 hours (see “Microwave functions”), a proving duration (see “Timed cooking”) or delayed proving (see “Delayed cooking”).



## Use


- Press the control knob to make the desired changes.



**i** Unless otherwise set, the proving will have a maximum duration of 13 hours.

**i** The light inside the oven will remain off during the proving function.

- At the end, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing or turning one of the two knobs or by opening the door.

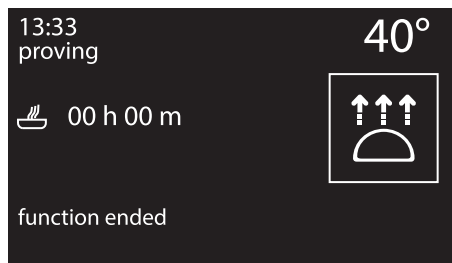


When using the proving function the temperature cannot be altered.


## Reheat

**i** This function allows you to heat previously cooked food which has been kept cool or in the refrigerator.

- Place the food to be heated inside the oven.
- Turn the control knob to the right or left to select **reheat** from the "special functions" menu.

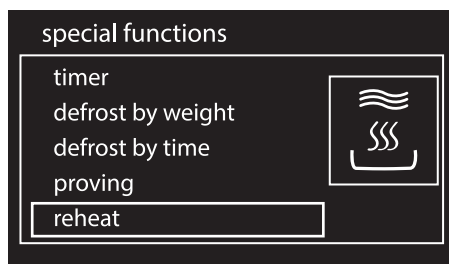

- Press the control knob to confirm.

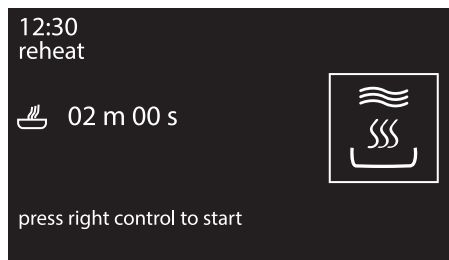

- Turn the control knob to modify the reheating duration.
- Press the control knob to confirm the parameters and start reheating.



## Sabbath mode




This function results in the appliance operating in a particular way:

- Cooking can proceed indefinitely, it is not possible to set any cooking duration.
- No preheating will be performed.
- The cooking temperature which can be selected varies between 60-100 °C.
- The oven light remains off, any action such as opening the door or manually activating the oven via the knob does not turn the light on.
- The internal fan remains turned off.
- Knob illumination and audible prompts remain disabled.




After activating the Sabbath mode the settings cannot be altered. Using the knobs will have no effect; only the control knob remains active to allow you to return to the main menu.


2. Press the control knob to confirm.

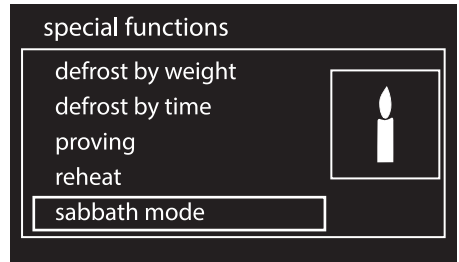

3. Turn the control knob to the right or left to change the heating temperature.

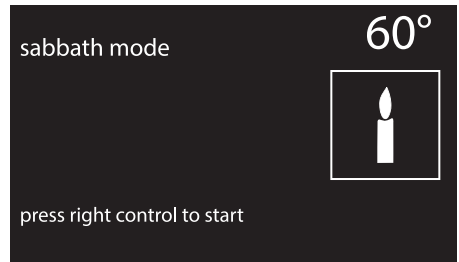

4. Press the control knob to start the Sabbath mode.

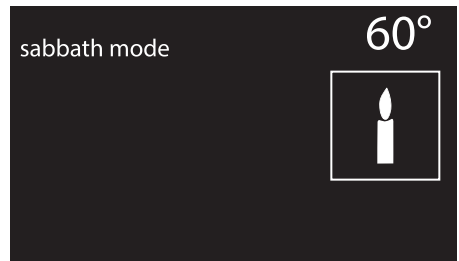

1. Turn the control knob to the right or left to select **sabbath mode** from the "special functions" menu.

5. When completed, keep the control knob pressed for at least 5 seconds to return to the main menu.




## 3.7 Preset programs




This mode allows you to select a previously stored program for cooking food. The appliance will automatically calculate the optimum cooking parameters according to the weight selected.

1. On the clock screen, press the control knob to access the main menu.
2. Turn the control knob to the right or left to select **preset programs** from the main menu.
3. Press the control knob to confirm.

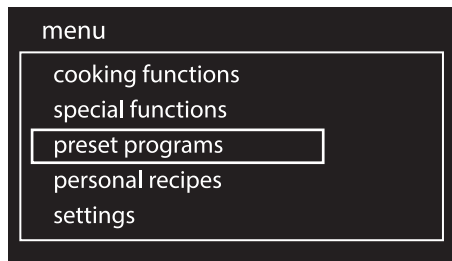

## Starting a program

1. Turn the control knob to the right or left to select the type of dish required from the "preset programs" menu.
2. Press the control knob to confirm.

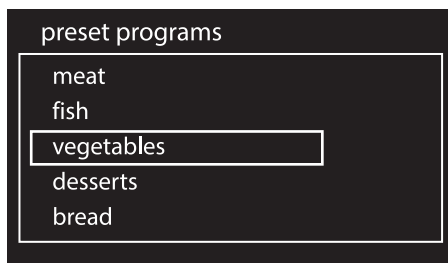

3. Select the subtype of dish to be cooked and press the control knob confirm.







4. Select the type of cooking (according to the chosen dish where possible) and press the control knob to confirm.




It is now possible to start the selected program, permanently modify the settings, or use the delayed cooking function.

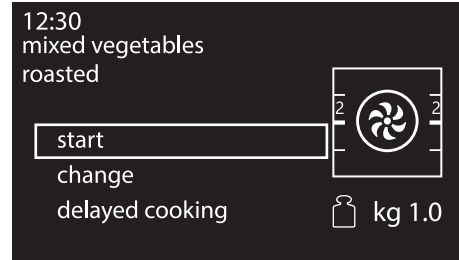

5. Turn the control knob to select the weight of the dish.

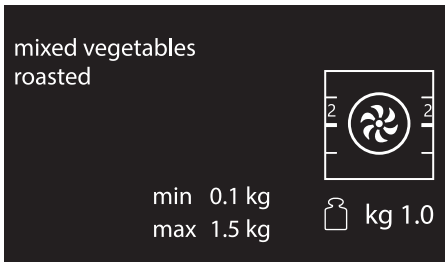

6. If you select the **start** option, cooking will start using the default program settings and all the set parameters will be shown on the display.

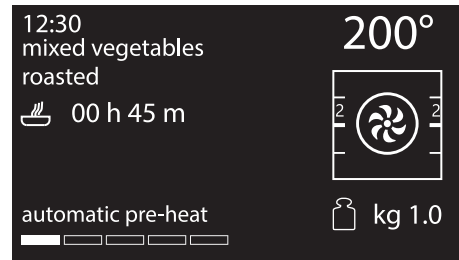

The time indicated does not include the time required to reach the set temperature.



Some of the predefined cooking parameters can be changed at any time, even after cooking has started.




## Use

7. A specific message will indicate when you should put the dish in the oven and start cooking.



8. Press the control knob to start cooking.

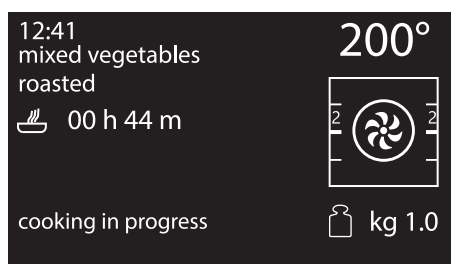

## End of program

1. The appliance will warn the user when the preset program finishes via the buzzer and the flashing symbol.



2. To carry out a new cooking cycle with the parameters that are already set, press the control knob (press it twice if the buzzer is on). The appliance will restart cooking automatically if it is still at the correct temperature, otherwise it will also restart the preheating stage.



Cooking dishes one after another is useful when cooking dishes of the same type. For example, when baking pizzas in succession.



It is not recommended to put the dish in the oven whilst the oven is warming up. Wait for the appropriate message to appear.


3. Press the return knob to exit and end the program.






## Making permanent changes to a program

1. In the selected preset program, turn the control knob to the left or right to select **change** from the menu of the selected dish.
2. Press the control knob to confirm.

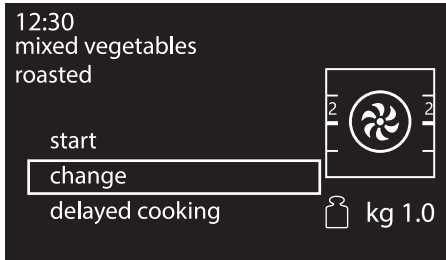


3. Turn the control knob to the right or left to select the **function** to associate with the preset program.

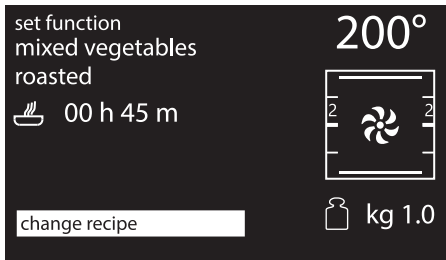


4. Press the control knob to confirm.

5. Turn the control knob to the right or left to select the **weight** of the dish to associate with the preset program.

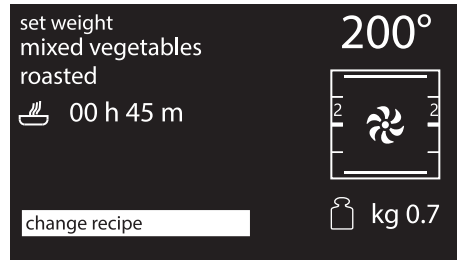

6. Press the control knob to confirm.
7. Turn the control knob to the right or left to select the cooking **duration** to associate with the preset program.

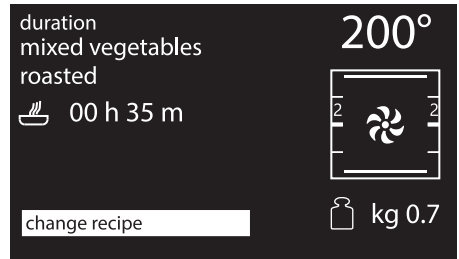


8. Press the control knob to confirm.




## Use

9. Turn the control knob to the right or left to select the cooking **temperature** to associate with the preset program.

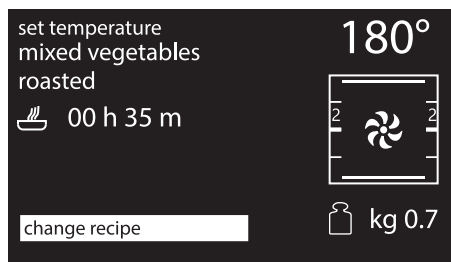


13. Pressing the control knob again will return to point 2 of the change sequence. Press the return knob to save the preset program. You will be prompted to confirm the changes you have just made.

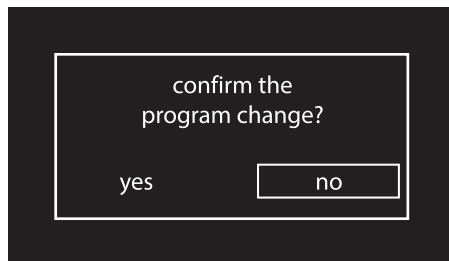


10. Press the control knob to confirm.

11. Turn the control knob to the right or left to select the **shelf** to associate with the preset program.

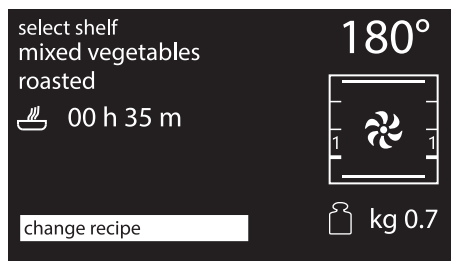

**i** If you do not confirm the changes the program will remain unchanged.

14. If the change is confirmed the display will show confirmation of this.

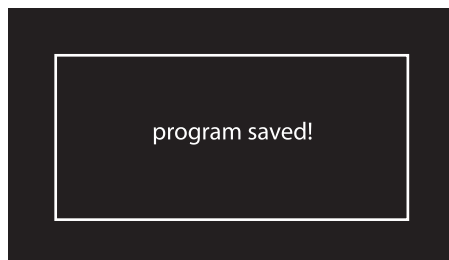

12. Press the control knob to confirm.



## Predefined programs table

**NE**

### MEAT

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Roast beef	rare	1		-	1	200	50
	medium	1		-	1	200	60
	well done	1		-	1	200	90
Pork loin	fresh	1		300	1	190	60
Lamb	medium	1.2		300	1	190	55
	well done	1.2		300	1	190	60
Veal	fresh	1		300	1	190	70
Pork spare ribs	fresh	1		-	3	250	16
Pork chops	fresh	1		-	3	250	15
Pork sausages	fresh	1		-	3	250	12
Bacon	fresh	0.5		-	3	250	7
Roast turkey	fresh	1		300	2	200	55
Roast chicken	fresh	1		300	2	200	50
Roast rabbit	fresh	1		300	2	190	400



## Use

### FISH

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Fish	fresh	0.5		300	1	160	30
Fish	frozen	0.5		300	1	160	40
Firm fish	fresh	0.5		300	1	160	20
Delicate fish	fresh	0.5		300	1	160	35
Snapper	fresh	1		300	1	160	40
Flounder	fresh	0.5		300	1	160	30

### VEGETABLES

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Grilled vegetables	fresh	0.5		-	3	250	25
Roast vegetables	fresh	1		-	2	200	45
Roast potatoes	fresh	1		300	2	220	30
Chips	frozen	0.5		-	2	220	13



## DESSERTS/PASTRIES

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Ring cake	fresh	1		-	1	160	60
Biscuits	fresh	0.6		-	1	160	18
Muffins	fresh	0.5		-	1	160	18
Profiteroles	fresh	0.5		-	1	180	70
Meringues	fresh	0.3		-	1	120	90
Sponge cake	fresh	1		-	1	160	60
Strudel	fresh	0.5		300	1	180	15
Tarts	fresh	0.8		-	1	170	40
Brioche bread	fresh	1		-	1	180	40
Croissants	fresh	0.6		-	1	160	30

## BREAD

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
White leavened bread	fresh	1		-	1	200	30
Focaccia	fresh	0.5		-	1	190	20



## Use

### PIZZA

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Pan baked pizza	fresh	1		-	1	250	9
Pizza	frozen	0.3		-	1	250	8
Stone baked pizza	fresh	0.5		-	1	250	6

### PASTA

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Pasta bake	fresh	2		-	1	220	40
Lasagne	fresh	2		-	1	230	35
Lasagne	frozen	0.3		500	1	230	9
Paella	fresh	0.5		-	1	190	25
Quiche	fresh	1		-	1	200	40
Soufflé	fresh	0.5		-	1	180	25

### SLOW COOKING

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Veal	fresh	1		-	1	90	360
Beef	rare	1		-	1	90	105
Beef	well done	1		-	1	90	380
Pork	fresh	1		-	1	90	330
Lamb	fresh	1		-	1	90	360




### 3.8 Personal recipes



This menu allows you to enter a personal recipe with the parameters you wish to use. On first use, the appliance will only offer to let you add a new recipe. After storing your personal recipes, they will be available in the relative menu.


1. On the clock screen, press the control knob to access the main menu.
2. Turn the control knob to the right or left to select **personal recipes** from the main menu.
3. Press the control knob to confirm.

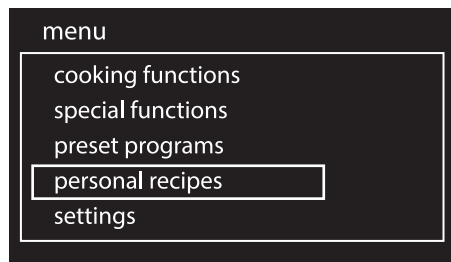

It is possible to store around 10 personal recipes.

### Adding a recipe

1. Select **add** from the "personal recipes" menu.

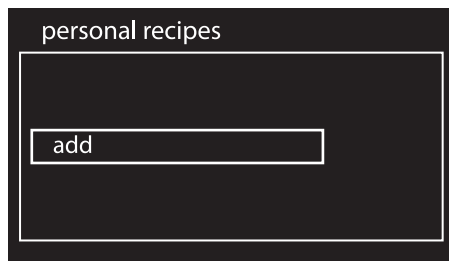

2. Turn the control knob to the right or left to select the **function** to associate with the recipe.



3. Press the control knob to confirm.



## Use

4. Turn the control knob to the right or left to select the **weight** of the dish to associate with the recipe.




5. Press the control knob to confirm.




The weight can be set or modified up to 2.5 kg, but the user is responsible for ensuring that the dish will fit correctly inside the oven.

6. Turn the control knob to the right or left to select the cooking **duration** to associate with the recipe.

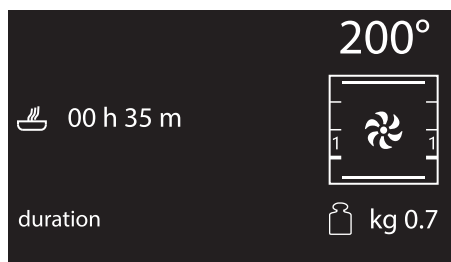


7. Press the control knob to confirm.

8. Turn the control knob to the right or left to select the cooking **temperature** to associate with the recipe.

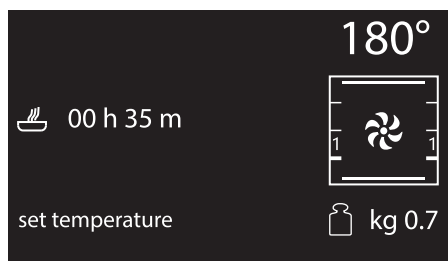

9. Press the control knob to confirm.

10. Turn the control knob to the right or left to select the **shelf** to associate with the recipe.

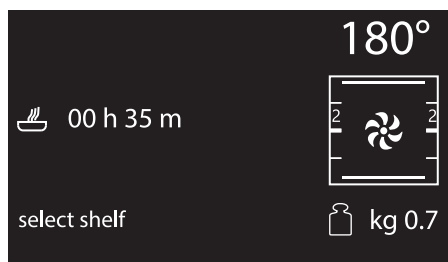



11. Press the control knob to confirm.





12. Pressing the control knob again will return to point 2 of the change sequence. You must press the return knob to save the recipe. The appliance will ask you to enter a name for the recipe you have just created.

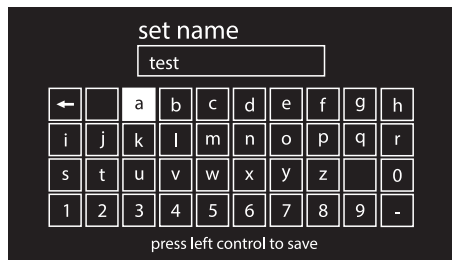

13. Enter the name of the recipe. Turn the control knob to select the characters to enter. Each time the control knob is pressed, a character of the name will be entered. The character  deletes the previous letter.




The recipe name can contain maximum 10 characters, including spaces.




The name must contain at least one character in order to store the recipe.

14. After entering the name of your recipe, press the return knob to confirm or cancel the information you have entered. Select **YES** if you wish to store the recipe.

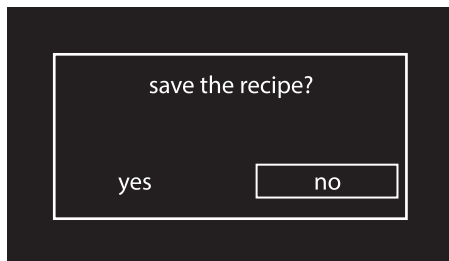

If you select "NO", you will lose all modifications made.

15. If the change is confirmed the display will show confirmation of this.

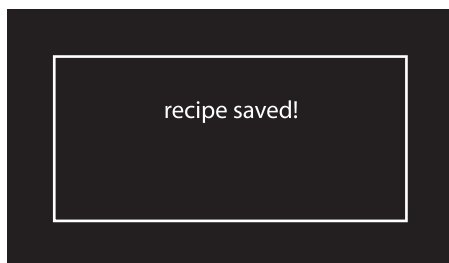





## Use

### Using a personal recipe

1. Turn the control knob to the right or left to select a previously stored **personal recipe** from the “personal recipes” menu (in the example, the recipe **test** has been stored).

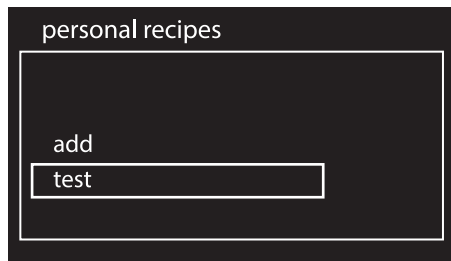


2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select **start**.

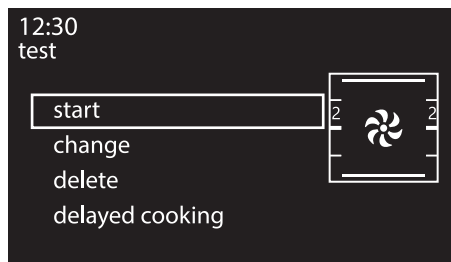

4. Press the control knob to confirm.

Cooking will start with the parameters previously set for the recipe.

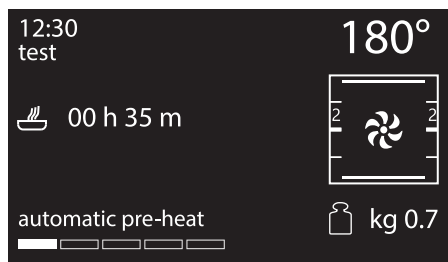


**i** During cooking it is always possible to modify the temperature and cooking time, but this will not be saved to the recipe for future use.




## Changing a personal recipe

1. Turn the control knob to the right or left to select a previously stored **personal recipe** from the "personal recipes" menu (in the example, the recipe **test** has been stored).

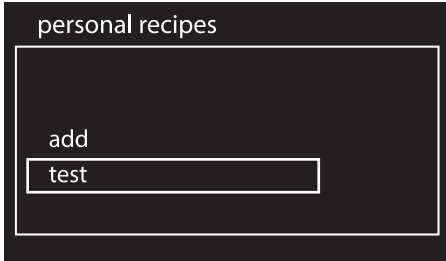


2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select **change**.

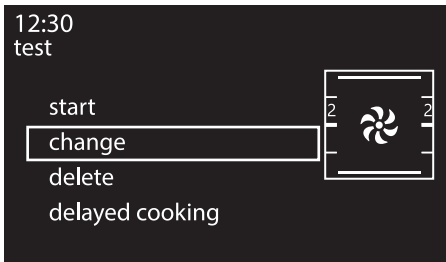


4. Press the control knob to confirm.
5. Repeat the same steps starting from point 2 in chapter "Adding a recipe".

## Deleting a personal recipe

1. Turn the control knob to the right or left to select a previously stored **personal recipe** from the "personal recipes" menu (in the example, the recipe **test** has been stored).

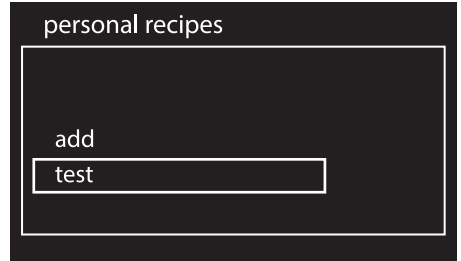

2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select **delete**.

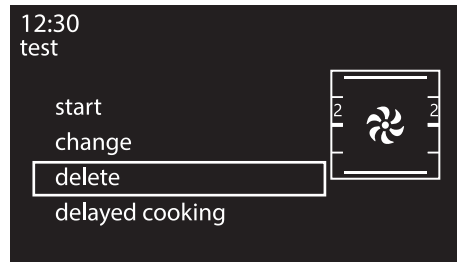

4. Press the control knob to confirm.



## Use

5. Confirm the deletion. Select YES to permanently delete the recipe.




6. If you confirm the deletion, the display will show a confirmation message.



## Delayed cooking

1. Turn the control knob to the right or left to select a previously stored **personal recipe** from the "personal recipes" menu (in the example, the recipe **test** has been stored).

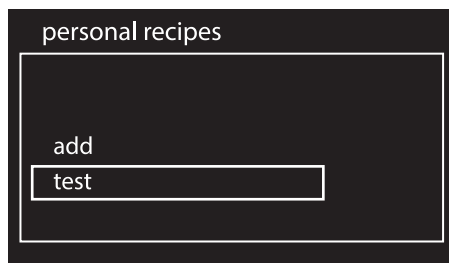


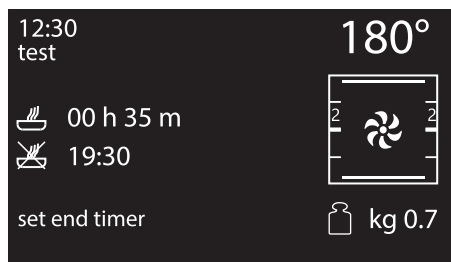
2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select **delayed cooking**.




4. Press the control knob to confirm.




5. Turn the control knob to the right or left to select the cooking end time with the control knob. The  symbol flashes.



6. Press the control knob to confirm.

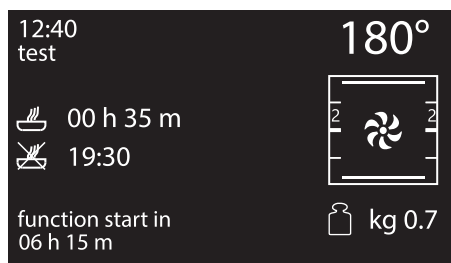


After a few seconds the  symbol will stop flashing. The appliance waits for the delay start time.

### 3.9 Settings



The product's configuration can be set using this menu.

1. On the clock screen, press the control knob to access the main menu.
2. Turn the control knob to the right or left to select **settings** from the main menu.
3. Press the control knob to confirm.

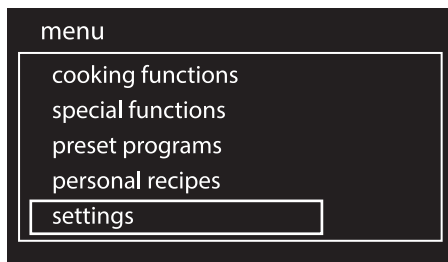




## Use


### Language

Sets the interface language from those available.

1. Turn the control knob to the right or left to select **language** from the "settings" menu.

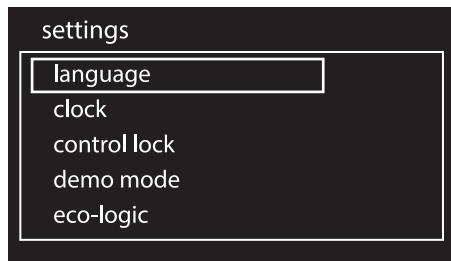


2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select the required language.

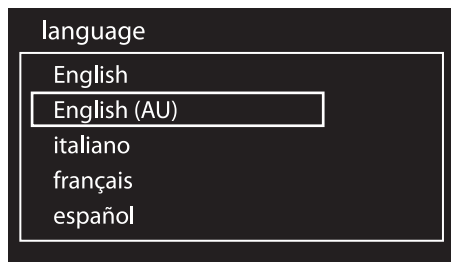


4. Press the control knob to confirm the selected language.

### Clock

Sets the time displayed.

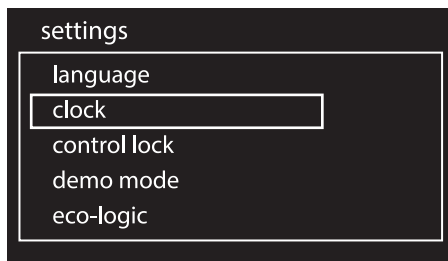

1. Turn the control knob right or left to set the hours.
2. Press the control knob to change to setting the minutes.
3. Turn the control knob right or left to set the minutes.

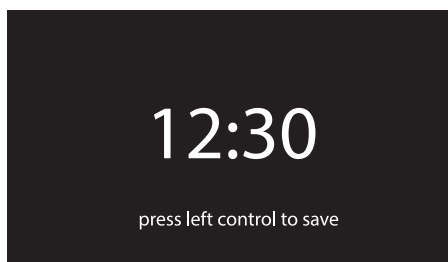


4. Press the return knob to confirm.





## Control lock

Allows the appliance to automatically lock the controls after one minute of normal operation without any intervention from the user.

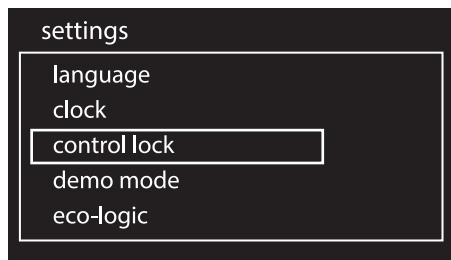

- To confirm activation of the control lock, select **YES**.

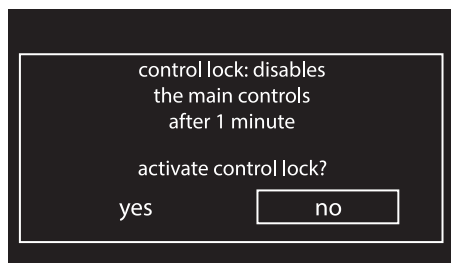

During normal operation, it is indicated by the  indicator light coming on.


- To temporarily disable the lock during cooking, keep the return knob pressed for 3 seconds. One minute after the last setting the lock will become active again.




If the control and return knobs are touched or change position, the display will show a warning for two seconds.

## Demo mode (for showrooms only)

This mode allows the appliance to deactivate all heating elements, while keeping the control panel active.

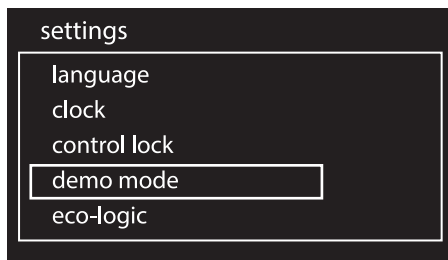

- To confirm that you wish to activate demo mode, select **YES**.

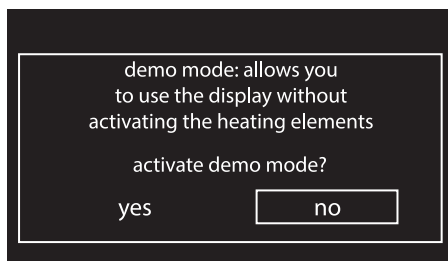

If the mode is active, "demo mode" will be shown on the display.




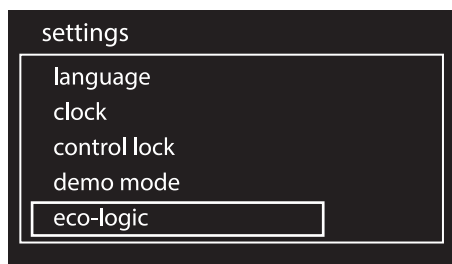
To use the appliance normally, set this mode to **OFF**.




## Eco-Logic (on some models only)

This mode allows the appliance to limit the power used. Suitable for simultaneous use with further home appliances.

If this option is enabled, the  symbol will appear on the display.




- To confirm that you wish to activate eco-logic mode, select YES.

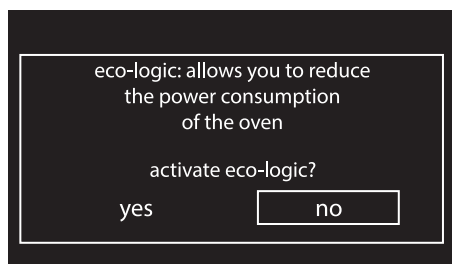


When eco-logic mode is active, preheating and cooking times may be extended.

## Sound

Whenever one of the knobs is pressed, the appliance beeps. This setting disables these sounds.

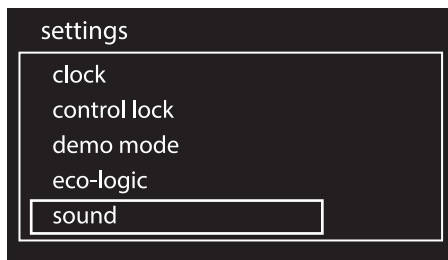

- To disable the sound when the knobs are pressed, select NO.

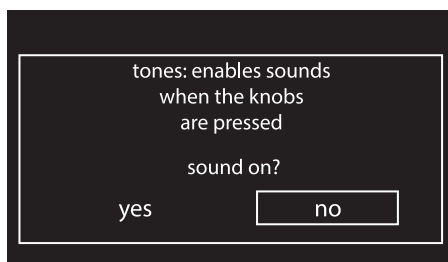






## Keep warm

This mode allows the appliance to keep cooked food warm (at low temperatures) after cooking finishes with a cooking cycle for which a duration has been set (if this is not manually interrupted), without altering the taste and smell obtained during cooking.

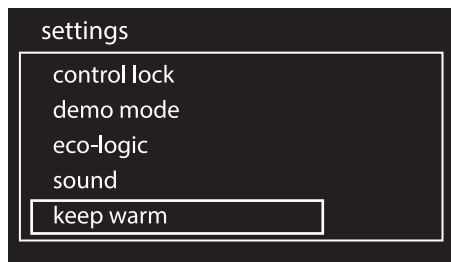


- To confirm that you wish to activate the keep warm mode, select YES.



## Eco-Light

For greater energy savings, the light is automatically deactivated one minute after the start of cooking.

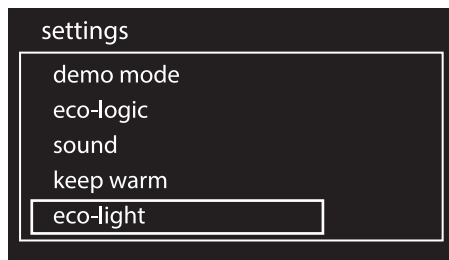

- To confirm that you wish to activate the eco-light mode, select YES.



To prevent the appliance from turning off the light automatically after one minute set this mode to OFF.



The manual on/off control is always available with both settings by turning the return knob to the right.





## Use


### Digital clock (on some models only)

Displays the time in digital format.

When no appliance function is active, the display will show the current time in digital format.

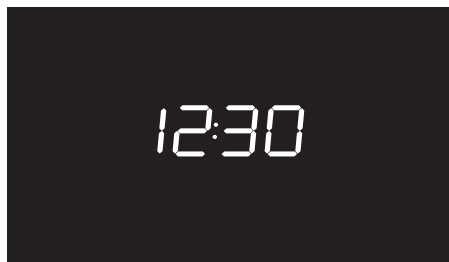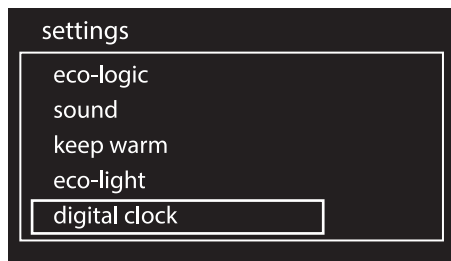

- To confirm that you wish to activate the digital clock, select YES.

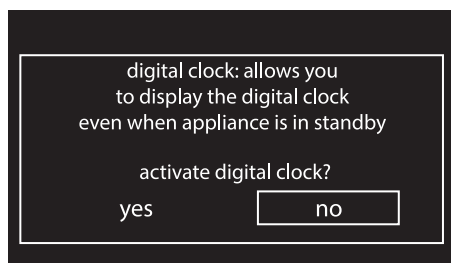



## 4 Cleaning and maintenance

### 4.1 Instructions



**High temperature inside the oven cavity after use**  
**Danger of burns**

- Perform cleaning only after letting the appliance cool down.



**Improper use**  
**Risk of damage to surfaces**

- Do not use steam jets to clean the appliance.
- Do not use cleaning products containing chlorine, ammonia or bleach on steel parts or parts with metallic finishes on the surface (e.g. anodizing, nickel- or chromium-plating).
- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges) on glass parts.
- Do not use rough or abrasive materials or sharp metal scrapers.
- Failure to clean the oven cavity may shorten the life of the appliance and cause a hazard.
- Always remove food residues from the oven cavity.



**Improper use**  
**Danger of explosion/burns**

- Do not use detergents with high alcohol content or which can release inflammable vapours. Subsequent heating could set off an explosion inside the appliance.



If a lamp is damaged, contact Technical support for a replacement. This fault will not affect the integrity of the appliance which can continue to be used.

### 4.2 Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

#### Ordinary daily cleaning

Always use only specific products that do not contain abrasives or chlorine-based acids.

Pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth.



## Cleaning and maintenance

### Food stains or residues

Do not use metallic sponges or sharp scrapers as they will damage the surfaces.

Use ordinary non-abrasive products with the aid of wooden or plastic utensils if necessary. Rinse thoroughly and dry with a soft cloth or a microfibre cloth.

Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.

### Drying

Cooking food generates moisture inside the appliance. This is a normal phenomenon and does not affect the appliance's operation in any way.

Each time you finish cooking:

1. Let the appliance cool down.
2. Remove any dirt from inside the appliance.
3. Dry the interior of the appliance with a soft cloth.
4. Leave the door open until the inside of the appliance has dried completely.

### 4.3 Cleaning the door glazing

The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll. In case of stubborn dirt, wash with a damp sponge and an ordinary detergent.




We recommend the use of cleaning products distributed by the manufacturer.

### 4.4 Cleaning the oven cavity

In order to keep oven cavity in the best possible condition, clean it regularly after letting it cool down.

Take out all removable parts.

Clean the oven racks with warm water and non-abrasive detergent. Carefully rinse and dry damp parts.

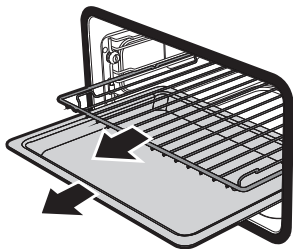

The oven should be operated at the maximum temperature for about 15-20 minutes after the use of specific products, to burn off the residues left inside the oven.




## Removing racks/trays support frames


Removing the guide frames enables the sides to be cleaned more easily.

To remove the guide frames:

1. Unscrew the two fastening pins of the frame:

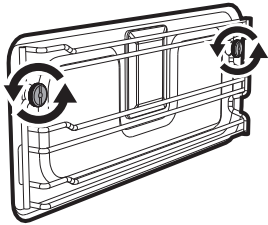

2. Pull the frame towards the inside of the oven cavity in order to release it from the fastening pins.

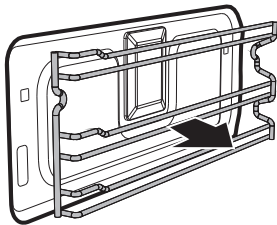


3. When cleaning is complete, repeat the above procedures to put the guide frames back in.


## Cleaning the top of the compartment

The appliance is fitted with a tilting grill element that allows for easy cleaning of the upper part of the oven cavity.

1. Free the upper heating element by gently lifting it and rotating its retaining latch by 90 degrees.

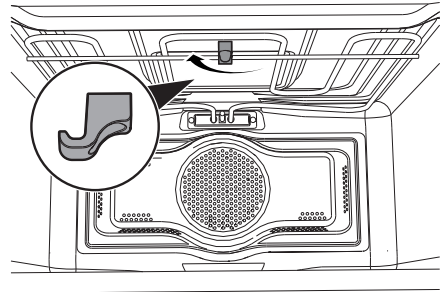

2. Gently lower the heating element until it stops.

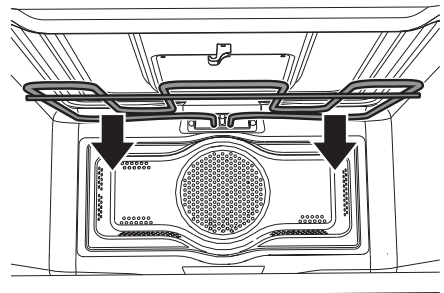

**Improper use**

**Risk of damage to the appliance**

- Do not excessively flex the element during cleaning.

3. When you have finished cleaning, place the heating element back in position and turn the retaining latch to lock it in place.



## Cleaning and maintenance

### 4.5 Vapour Clean



Vapour Clean is an assisted cleaning procedure which facilitates the removal of dirt. This process makes it possible to clean the oven cavity very easily. The dirt residues are softened by the heat and water vapour for easier removal afterwards.



**Improper use**  
**Risk of damage to surfaces**


- Remove any food residues or large spills from previous cooking operations from the oven cavity.
- Carry out assisted oven cleaning operations only when the oven is cold.

### Preliminary operations


Before starting the Vapour Clean function:

- Completely remove all accessories from inside the oven.

- Pour approx. 40 cc of water onto the floor of the oven. Make sure it does not overflow out of the cavity.

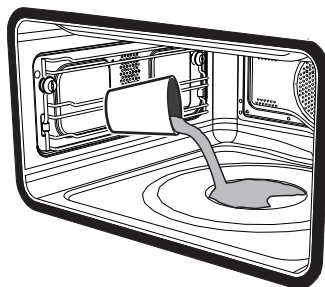

- Spray a water and washing up liquid solution inside the oven using a spray nozzle. Direct the spray against the side walls, upwards, downwards and towards the deflector.

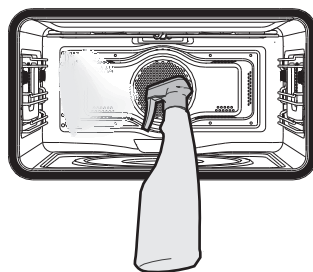

- Close the door.



We recommend spraying approx. 20 times at the most.



## Vapour Clean setting




If the internal temperature is greater than that required for the Vapour clean function, the cycle will be stopped immediately and "Internal temperature unsafe, please wait until the oven is cool" will appear on the display. Leave the appliance to cool down before activating the assisted cleaning cycle.




The duration and temperature parameters cannot be modified by the user.


1. Turn the control knob to the right or left to select the **vapour clean** function from the "special functions" menu. Then press it to confirm.

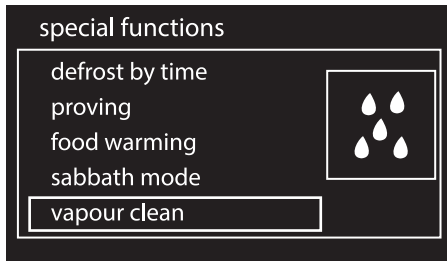


2. The duration and temperature of the cleaning cycle will appear on the display.

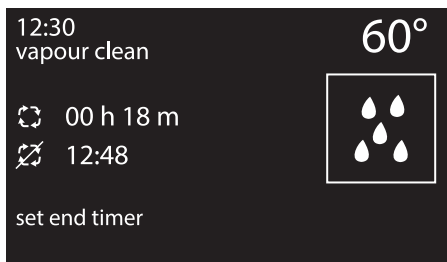

3. Press the control knob twice to start the cleaning cycle.

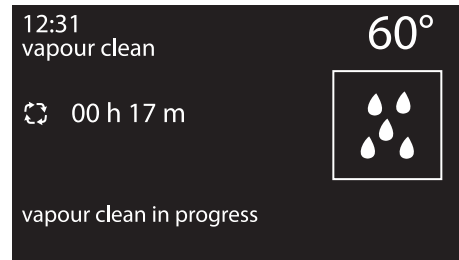

4. A buzzer will indicate the end of the vapour clean cycle.

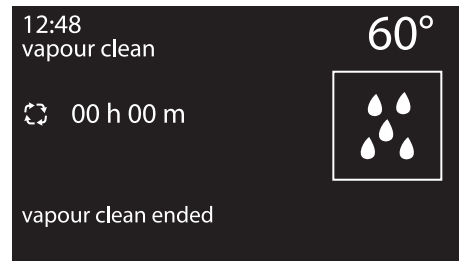






## Cleaning and maintenance

### Setting timed vapour clean

It is possible to program the vapour clean start time, like any cooking function.

1. After selecting the vapour clean special function, press the control knob. The display shows the current time and the  symbol comes on.
2. Turn the control knob to set the time you wish vapour clean to finish.
3. After a few seconds, the  and  symbols remain lit steadily and the appliance waits for the set start time to start the cleaning cycle.

### End of the Vapour Clean cycle

1. Open the door and wipe away the less stubborn dirt with a microfibre cloth.
2. Use an anti-scratch sponge with brass filaments on tougher encrustations.
3. In case of grease residues use specific oven cleaning products.
4. Remove any remaining water from the oven cavity.

For improved hygiene and to prevent food being affected by unpleasant odours, we recommend that you dry the oven cavity using a fan assisted function at 160°C for approximately 10 minutes.



We recommend wearing rubber gloves for these operations.



For easier manual cleaning of the parts difficult to reach, we recommend removing the door.





## What to do if...

The display is completely off:

- Check the mains power supply.
- Check whether an all-pole switch upstream of the appliance supply line is in the "ON" position.

The appliance does not heat up:

- Check whether it has been set to "demo" mode (for further details see "Demo mode (for showrooms only)").

The controls do not respond:

- Check whether it has been set in "control lock" mode (for further details see "Control lock").

The cooking times are longer than those indicated in the table:

- Check whether it has been set in "eco-logic" mode (for further details see "Eco-Logic (on some models only)").

If the door is opened during a fan assisted function, the fan stops:

- This is not a fault. It is a normal operation of the appliance, useful when cooking foods in order to avoid excessive heat escaping. When the door is closed, the oven will return to normal operation.



If the problem has not been resolved or in the case of other types of fault, contact your local technical support centre.



If other ERRx error messages are indicated:

Note down the error message, function and set temperature and contact your local technical support centre.



# Installation

## 5 Installation

### 5.1 Electrical connection



**Power voltage**  
**Danger of electrocution**

- Have the electrical connection performed by authorised persons.
- The appliance must be connected to earth in compliance with electrical system safety standards.
- Disconnect the mains power supply.

#### General information

Check the grid characteristics against the data indicated on the plate.

The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance.


Do not remove this plate for any reason.

The appliance works at 220-240 V~.

Use a three-pole cable (3 x 1.5 mm<sup>2</sup> internal conductors).

Perform the ground connection using a wire that is 20 mm longer than the other wires.

**220-240V~**

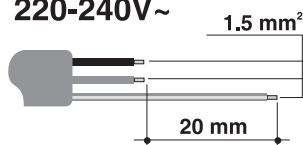

#### Fixed connection

Fit the power line with an all-pole circuit breaker in compliance with installation regulations.

The omnipolar circuit breaker should be located near the appliance and in an easily reachable position, according to applicable electrical codes.

#### Connection with plug and socket

Make sure that the plug and socket are of the same type.

Avoid using adapters and shunts as these could cause overheating and a risk of burns.

#### Cable replacement



**Power voltage**  
**Danger of electrocution**

- Disconnect the mains power supply.
1. Unscrew the rear casing screws and remove the casing to access the terminal board.
  2. Replace the cable.
  3. Make sure that the cables (for the oven or any cooktop) follow the best route in order to avoid any contact with the appliance.



## 5.2 Positioning



**Heavy appliance**  
**Crushing hazard**

- Position the appliance into the cabinet cutout with the help of a second person.



**Pressure on the open door**  
**Risk of damage to the appliance**


- Never use the oven door to lever the appliance into place when fitting.
- Avoid exerting too much pressure on the oven door when open.



**Heat production during appliance operation**  
**Risk of fire**

- Check that the piece of furniture material is heat resistant.
- Check that the piece of furniture has the required slots.
- Do not install the appliance in a recess which can be closed with a door or in a cupboard.


### Position of the power cable

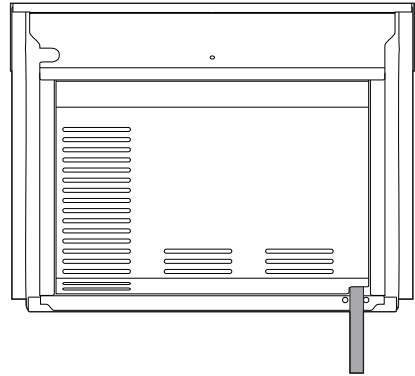

(rear view)

### Front panel seal

Glue the supplied seal to the rear part of the front panel to avoid water or other liquids from leaking in.

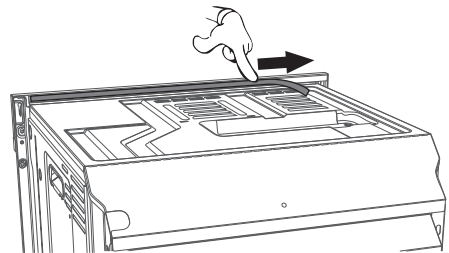





# Installation

## Fastening bushings


Remove the bushing covers on the front of the oven.

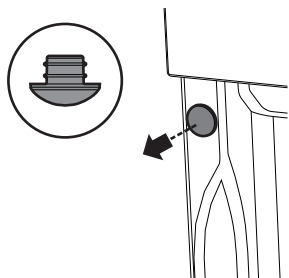


Mount the appliance into the recess.  
Secure the appliance to the piece of furniture using screws.

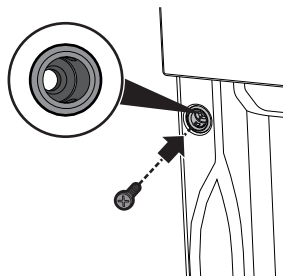


Cover the bushings with the covers removed previously.

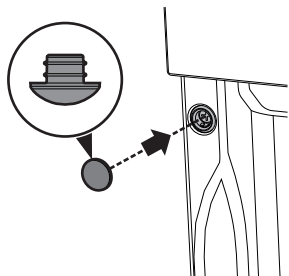

## Appliance overall dimensions (mm)

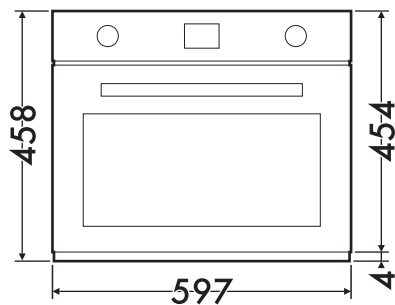


(front view)

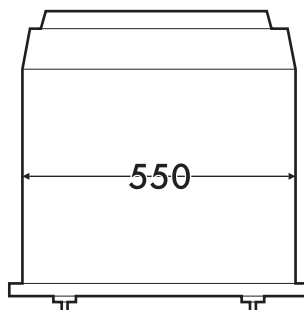





(top view)



## Mounting under worktops (mm)

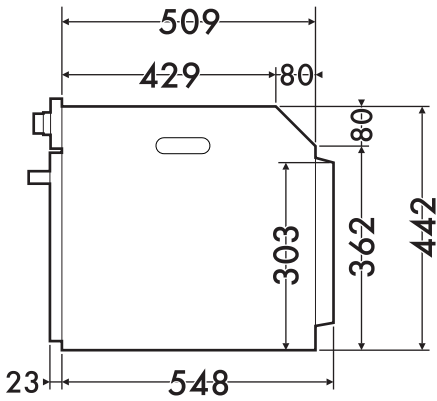

(side view)

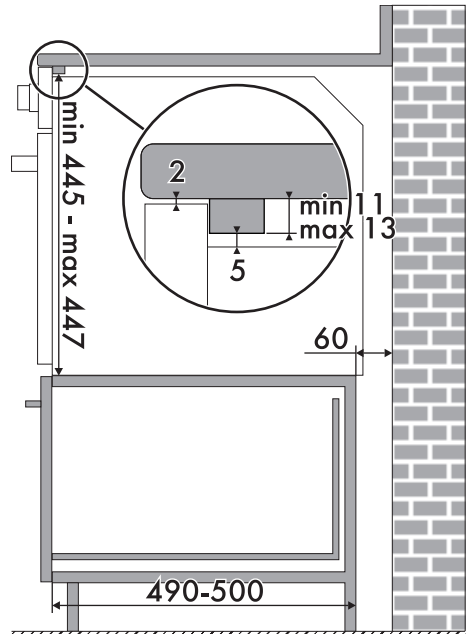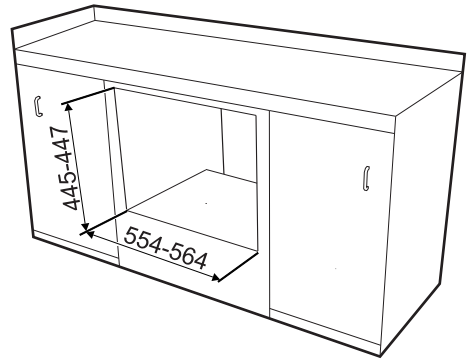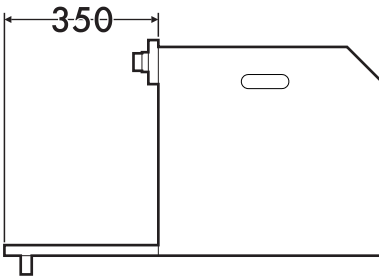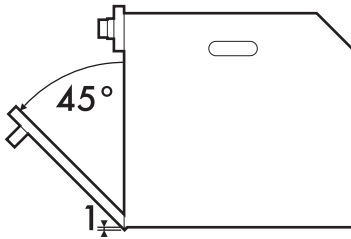


Make sure that the piece of furniture rear/bottom part has an opening of approx. 60 mm.




# Installation

## Mounting into a column (mm)

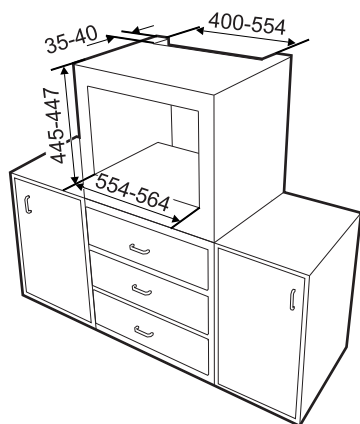

Make sure that the top/rear part of the piece of furniture has an opening approx. 35-40 mm deep.

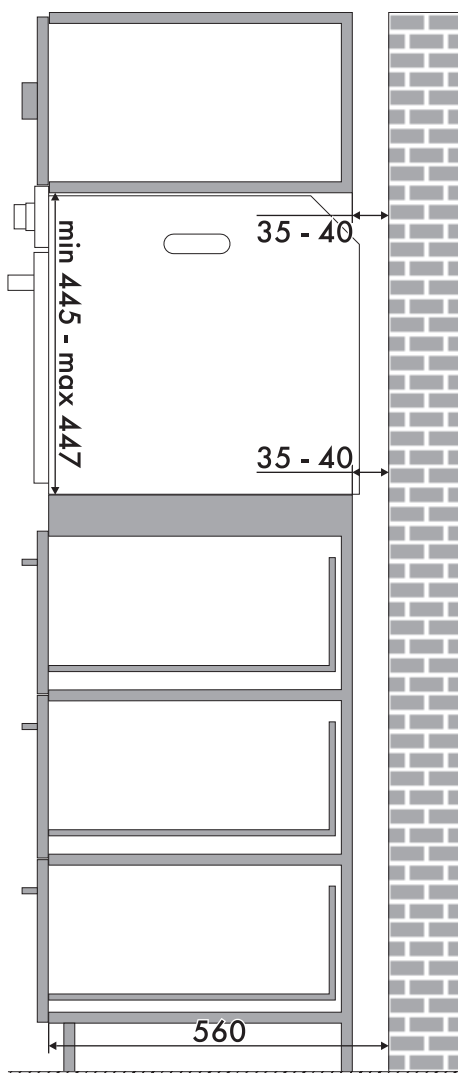





914777911/B