

Contents

1 Instructions	22
1.1 General instructions	22
1.2 This user manual	22
1.3 Declaration of conformity	23
1.4 Declaration art. 10.10 Directive 2014/53/EU	23
1.5 How to read the user manual	23
2 SmegConnect	24
2.1 Connectivity requirements	24
2.2 Installing the App	24
2.3 Product registration	24
2.4 Remote connection	29
2.5 Changing Access Point credentials	30
2.6 SmegConnect Menu	33
2.7 Connection information	34
2.8 Deleting the registration	34
2.9 Software updates	35
2.10 What to do if...	37

ENGLISH

Dear customer, we would like to thank you for your confidence in us.

By choosing one of our products, you have opted for solutions where research for beauty meets innovative technical design to provide unique objects which become pieces of furniture.

We hope you get the most out of your household appliance.

Kindest regards.

SMEG S.p.A.

Apple, App Store and iOS are trademarks of Apple Inc.

Google Play Store and Android are trademarks of Google Inc.

Wi-Fi is a trademark of Wi-Fi Alliance.

The manufacturer reserves the right to make any changes deemed necessary for the improvement of its products without prior notice. The illustrations and descriptions contained in this manual are therefore not binding and are merely indicative.

TRANSLATION OF THE ORIGINAL INSTRUCTIONS

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: www.smeg.com



Instructions

1 Instructions

1.1 General instructions

- In order to be used the App requires a Wi-Fi network with an Internet router, via which the appliance and the mobile device are connected.
- If the signal is too weak, install a Wi-Fi repeater close to the appliance.
- When outside the range of the Wi-Fi network, it is assumed that a data connection will be available for the mobile device in order for the App to be used. **WARNING:** depending on your mobile network operator contract, additional costs may be incurred.
- The appliance can operate offline as a "non connected" electrical domestic appliance but cannot be controlled via the App when the Wi-Fi or data connection is disabled.
- In compliance with the provisions regarding electromagnetic compatibility, the appliance belongs to group 2 and class B (EN 55011).

- This appliance complies with the current standards and directives regarding safety and electromagnetic compatibility. However, it is recommended that people who have pacemakers fitted, maintain a minimum distance of 20-30 cm between the pacemaker and the device when it is in operation. Contact the pacemaker manufacturer for further information.
- **For safety reasons and in compliance with current legislation, Microwave, Combined microwave, Grill, Vapor Clean and Pyrolytic functions (where available) can be set but not activated remotely.**

1.2 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

Read this user manual carefully before using the appliance.



1.3 Declaration of conformity

The manufacturer, SMEG, declares that the following types of radio equipment:

- SF4303WMCX - SF4303WVCPX
SFP6303WTPX
- SF4104WMCN - SF4104WMCS
SF4104WVCPN - SF4104WVCPS
SFP6104WTPB - SFP6104WTPN
SFP6104WTPS
- SF4604WMCNR - SF4604WMCNX
SF4604WVCPNR - SF4604WVCPNX
SFP6604WSPNR - SFP6604WSPNX
SFP6604WTPNR - SFP6604WTPNX
SFP9305WSPX
- SF4106WMCX - SF4106WVCPX
SFP6106WTPB - SFP6106WTPN
SFP6106WTPS
- SF4606WMCNR - SF4606WMCNX
SF4606WVCPNR - SF4606WVCPNX
SFP6606WSPNR - SFP6606WSPNX
SFP6606WTPNR - SFP6606WTPNX
SFPR9606WTPNR - SFPR9606WTPNX

comply with the directive
2014/53/EU.

- Technology:
Wi-Fi IEEE 802.11 b/g/n.
- Frequency: **2400-2497 MHz.**
- Maximum output power:
+18.5 dBm.
- The appliance operates in the
ISM 2.4 GHz band.
- The maximum stand-by power consumption of the appliance connected to the mains is **2.0 W.**

The full text of the EU declaration of conformity is available at the following Internet address:

www.smeg.com/smegconnect/direttiva_red

1.4 Declaration art. 10.10 Directive 2014/53/EU

This radio equipment is **NOT subject to restrictions on putting into service or of existing requirements for authorisation of use in any EU Member State.**

1.5 How to read the user manual

This user manual uses the following reading conventions:

Instructions



General information on this user manual, on safety and final disposal.

Use



Information on the use of the appliance and its accessories.



Information



2 SmegConnect

The appliance is equipped with **SmegConnect** technology that allows the user to control the appliance via an App on his/her smartphone or tablet computer.

For further information, please refer to the booklet provided and / or visit the website

www.smeg.com

2.1 Connectivity requirements

- Smartphone or tablet running iOS version 10.x or later or Android version 5.1 or later.
- Wi-Fi network (2.4 GHz band, WPA2 protected) active and available in the place where the appliance is installed.
- Internet connection.
- Name and password of the home Wi-Fi network or WPS (Wi-Fi Protected Setup) mode available.

2.2 Installing the App

- Download the **SmegConnect** App to your mobile device - smartphone or tablet computer from the App Store (Apple devices) or Google Play Store (Android devices) and install it.

2.3 Product registration



The registration process involves alternating between carrying out operations on the

App 

and on the display of the appliance .

Make sure that you are close to the appliance.



If the “**REGISTRATION FAILED!**” message appears on the display during the registration process, it means that some steps of the procedure were not carried out correctly or it was stopped.



The registration procedure can be interrupted by pressing the **RETURN**  button (available only on some screens).



Creating an account



A

1. Launch the **SmegConnect** App.
2. Enter the information required in order to register.



the fields marked with an asterisk "*" are mandatory.

3. A confirmation e-mail is sent to the address that has been entered when the registration procedure has been completed.

Connecting to the appliance

A

1. **Log in.**
2. In the following **Welcome Username** field, touch **Add product**.



Add product


3. In the following **Add product** screen, select the type of product that you wish to connect to (in this case "oven").

D



There is no need to activate the "Connectivity" setting on the appliance beforehand. The procedure starts automatically.

4. Touch the **SETTINGS**  button (at the bottom right) on the main menu display on the appliance.
5. Select **SmegConnect** .
6. Touch the **ACCESS** button.
7. Touch the **REGISTRATION**  button.
8. Select the registration procedure for the required product.

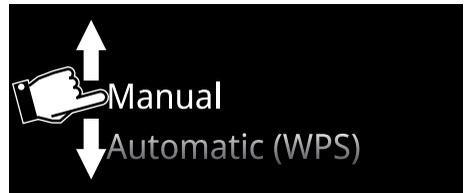



SmegConnect

Manual mode



D

1. Select Manual mode.

A

2. Select **Manual mode**.

Manual mode

Automatic mode (WPS)

3. Go to the Wi-Fi settings on the mobile device and select the “**smegconnect**” network.

4. Enter the password “**smeg0001**” and wait for the connection to be established.

5. Go back to the **SmegConnect** App and touch **Next**.

Next

D

6. Press the **CONFIRM** button within one minute .

Confirm your presence



A

7. Enter the Access Point information:

- Name of the home Wi-Fi network.
- Wi-Fi password.

Select your Wi-Fi network



Enter Wi-Fi password



i

The appliance supports network names (SSID) of up to 32 characters (spaces included) and WPA2 security settings (not WEP or WPA).

8. Touch **Next** and wait.

Next



i During this phase, the mobile device automatically reconnects to the Wi-Fi network or the initial data network. No action is required by the user.

9. Wait for the welcome screen to appear.

Registration completed successfully!



Welcome to SmegConnect
Your product is connected

D The “**REGISTRATION SUCCESSFUL!**” screen appears on the display of the appliance.

The **Connectivity**  icon (in the information area at the top right) remains on steadily. The product registration procedure has been completed.

The **SETTINGS**  menu now appears on the appliance’s display for the **Remote Control**  to be activated.

i Make sure that you activate the **Remote Control**  in order to control the appliance via the App.

Automatic mode (WPS)




i Make sure that the WPS option is enabled on your router.

i Make sure that the mobile device and the product connect to the same Wi-Fi network during the procedure.

D 1. Select Automatic mode (WPS) on the appliance.

A 2. Select **Automatic mode (WPS)**.

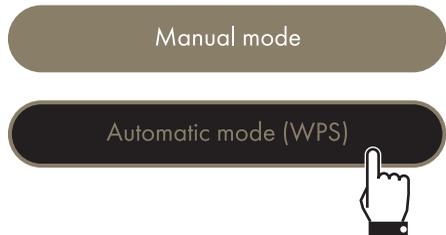


EN



D


3. Within two minutes, press the WPS button on your router.

4. Touch the **CONFIRM** button .

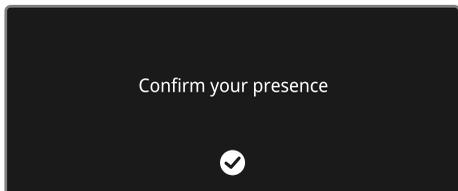

A

5. Wait for the welcome screen to appear.

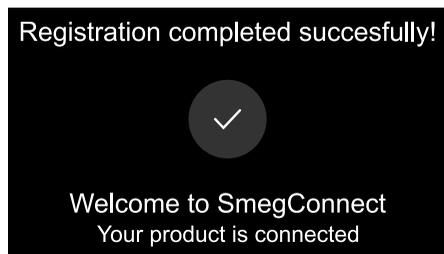

D

The “**REGISTRATION SUCCESSFUL!**” screen appears on the display of the appliance.

The **Connectivity**  icon (in the information area at the top right) remains on steadily. The product registration procedure has been completed.

The **SETTINGS**  menu now appears on the appliance’s display for the remote control to be activated.




Make sure that you activate the  **Remote Control** in order to control the appliance via the App.



During this phase, the mobile device automatically reconnects to the Wi-Fi network or the initial data network. No action is required by the user.



2.4 Remote connection

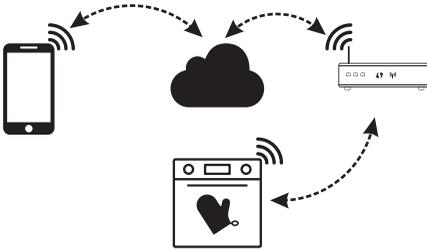

i Once the appliance has been registered, it can be connected or disconnected from the Internet at any time.

i The remote connection is only available when the appliance has been registered.

i The remote connection is already active when the registration procedure has been completed. Remote Control on the other hand is not enabled.

! For safety reasons and in compliance with current legislation, Microwave, Combined microwave, Grill, Vapor Clean and Pyrolytic functions (where available) can be set but not activated remotely.

D

To connect the appliance:

1. Touch the **SETTINGS**  button (at the bottom right) on the main menu display on the appliance.
2. Select **Connectivity** .
3. Select **On**.
4. Touch the **CONFIRM**  button to enable the Connectivity.

To control the appliance via the App:

5. Select  **Remote Control**.
6. Select **On**.

i Remote control is only available if the **Connectivity** is set to **On**.

7. Touch the **CONFIRM**  button to activate the  **Remote Control**.

i Remote control can also be enabled by pressing the  symbol (at the top right). The symbol changes colour when the remote control is enabled .

NE



i On some screens (for example the **SETTINGS**  menu and the pages on which the parameters of a cooking function can be modified), it is **NOT** possible to change the status of the **Remote control** by pressing .

i The Remote control is disabled in some cases when the door is opened.

i The Remote control is disabled if there is a temporary power failure.

i The Remote control is always active in **Showroom** and **Demo mode (for exhibitors only)**.

i Depending on the status of the appliance, it is not always possible to start a new function from the App (for example, if it is taking in water it is not possible to start a static function from the App).

i Some of the configuration settings of the appliance can also be changed via the App. Remote control must always be enabled.

i Only some of the settings will be available on the App. Some of these can be modified only if other functions are not active on the appliance.

2.5 Changing Access Point credentials

i The procedure for changing the Access Point credentials can be interrupted by pressing the **RETURN**  button (only available on some screens).

A

To change your Access Point credentials (**network name** or **password**):

1. **Log in**.
2. Access the App, go to the **Settings** menu of the product pages and select **Change Access Point**.

D

3. Touch the **SETTINGS**  button on the main menu display on the appliance.
4. Select  **SmegConnect**.
5. Touch the **ENTER** button.
6. Touch the **Change Access Point**  button.




Manual mode

D

1. Select Manual mode.

A

2. Select **Manual mode**.

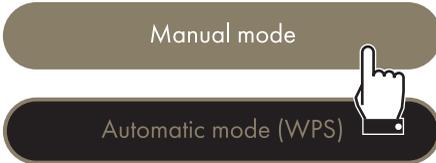


3. Go to the Wi-Fi settings on the mobile device and select the "smegconnect" network.
4. Enter the password "smeg0001" and wait for the connection to be established.
5. Go back to the SmegConnect App and touch **Next**.



D


6. Press the **CONFIRM** button within one minute .

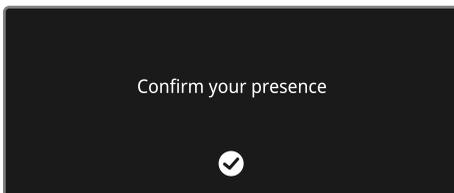

A

7. Enter the Access Point information:

- Name of the home Wi-Fi network (SSID)
- Wi-Fi password (key).

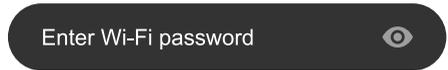


8. Touch **Next** and wait.



i During this phase, the mobile device automatically reconnects to the Wi-Fi network or the initial data network. No action is required by the user.

9. Wait for the welcome screen to appear.

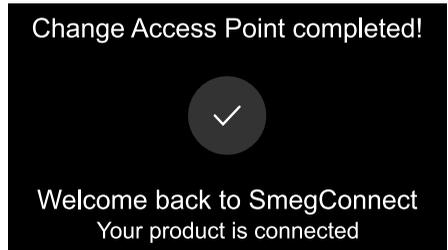

EN



The “**ACCESS POINT CHANGE COMPLETED SUCCESSFULLY!**” screen appears on the display of the appliance.

The **CONNECTIVITY** icon  (in the information area at the top right) remains on steadily. The change Access Point procedure has been completed.

The **SETTINGS**  menu now appears on the appliance’s display for  **Remote Control** to be activated.



Make sure that you activate the **Remote Control** in order to control the appliance via the App.

Automatic mode (WPS)



1. Select Automatic mode (WPS).



2. Select **Automatic mode (WPS)**.

Manual mode

Automatic mode (WPS)



3. Within two minutes, press the WPS button on your router.


4. Touch the **CONFIRM**  button.

Confirm your presence



**A**

5. Wait for the welcome screen to appear.

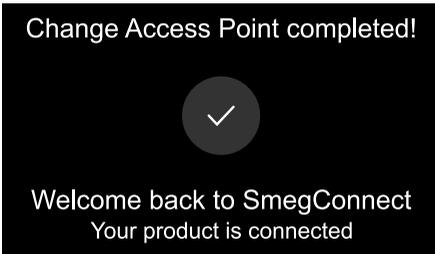

During this phase, the mobile device automatically reconnects to the Wi-Fi network or the initial data network. No action is required by the user.

D

The “**ACCESS POINT CHANGE COMPLETED SUCCESSFULLY!**” screen appears on the display of the appliance.

The **CONNECTIVITY** icon  (in the information area at the top right) remains on steadily. The change Access Point procedure has been completed.

The **SETTINGS**  menu now appears on the appliance’s display for remote control to be activated.



Make sure that you activate the **Remote Control** in order to control the appliance via the App.

2.6 SmegConnect Menu

D

This menu allows you to display some technical information about the connection:

- **Cloud:** Cloud connection status (**Not connected/Connected**).
- **Wi-Fi:** Access Point connection status (**not connected or the strength of the signal when connected**).
- **Access Point SSID:** name of the Wi-Fi network.
- **IPv4 network address:** IPv4 address of the connectivity card.
- **IPv6 network address:** IPv6 address of the connectivity card.
- **MAC address:** MAC address of the connectivity card.
- **Wi-Fi FW release:** Firmware version of the connectivity card.
- **SW Compliance ID:** identification of compliance with the essential requirements of the RED directive.



This information may be useful when requesting assistance.



2.7 Connection information



The following information about the connection can be found in the product pages under the **Settings** menu on the App:

- Appliance registration date
- Network name
- Strength of the Wi-Fi signal
- Mac address of the connectivity card
- Firmware version of the connectivity card
- IPv4 and IPv6 network addresses
- SW Compliance ID (identification of compliance with the essential requirements of the RED directive).

2.8 Deleting the registration



To delete the registration of the appliance:

- Access the App, go to the **Settings** menu of the product pages and follow the instructions.



The product can be registered again following the procedure described above.



To cancel the registration of the appliance on the product:

1. Touch the **SETTINGS**  button on the main menu display on the appliance.
2. Select  **SmegConnect**.
3. Touch the **ENTER** button.
4. Touch the **REGISTRATION**  button.
5. Touch the **DELETE**  button.
6. Touch the **CONFIRM**  button to confirm that you wish to cancel the registration.



i This procedure only deletes the registration and restores the factory settings for the **SmegConnect** menu.

i The appliance does not need to be connected to the cloud to delete the registration on the appliance.

i The deletion is only local. Remember to delete the registration on the App as well.

i The product can be registered again following the procedure described above.

A

To delete the user registration:

- Access the App, go to the **My account** menu and follow the instructions indicated in the privacy policy.

2.9 Software updates

D

Appliance connectivity software (firmware) updates are occasionally issued.

Downloading

If the appliance is connected to the home Wi-Fi network, updates are detected and downloaded automatically.

During download, the flashing

DOWNLOAD  icon appears instead of the **CONNECTIVITY**  icon.

i During download, the connectivity service is temporarily suspended (this lasts for a few minutes; it also depends on the speed of the connection).

i During download, it is not possible to change the **CONNECTIVITY**  and  **Remote control** settings or access the  **SmegConnect** menu and the relative procedures.




Installation

Updates can be installed automatically or require confirmation by the user.

Automatic update: the UPDATE icon  appears on the display during this phase to indicate that an update is taking place that does not require any action by the user.

Update with confirmation: the display indicates that a new update is available.

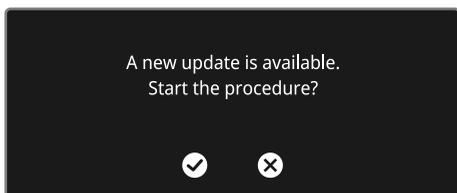


- Touch the CANCEL  button to cancel the update procedure.

 It will be possible to install the update at a later stage by pressing the UPDATE icon  in  SmegConnect (available only if the CONNECTIVITY  setting is ON).

or

- Touch the CONFIRM  button to confirm the update procedure.

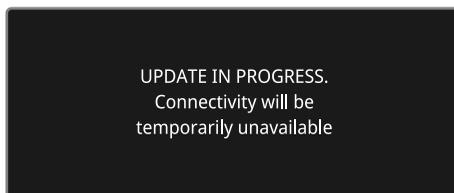

 During the update procedure with confirmation by the user, it is not possible to use the appliance normally.



At the end of the update procedure, the following appears on the display:



The appliance can now be used normally.

i The new software version can be seen in the  SmegConnect menu under Wi Fi FW release.

i If the update fails, it is anyway possible to continue to use the appliance and the connectivity service. The software version will remain the previous one.

i During installation, the connectivity service is suspended temporarily (this lasts for approximately 2 minutes).

2.10 What to do if...



During connection, the **CONNECTIVITY** icon  continues to flash (trying to connect...). If this continues for more than one minute, there may be problems with the remote connection:

- Make sure that the Wi-Fi router is switched on.
- Make sure that the Wi-Fi router is not too far away from the appliance.
- Check the Wi-Fi network (2.4 GHz band).
- Check the Internet connection.
- Unplug the appliance and try to connect again later.
- Unplug the appliance from the power socket and then switch it on again after having made sure that it was switched off.

The registration or change Access Point procedures do not work:

- Make sure that the Wi-Fi router is switched on.
- Make sure that the Wi-Fi router is not too far away from the appliance.
- Check the Wi-Fi network (2.4 GHz band).
- Check the availability of the WPA2 data protection mode.



- Make sure that the name of the network does not exceed 32 characters (including spaces).
- Check the Internet connection.
- Check the status of the data connection, if the mobile device uses this to access the Internet.
- Try the procedure again later.
- Unplug the appliance from the power socket and then switch it on again after having made sure that it was switched off.

For further information see:

- the **Advice** ➔ **FAQ** ➔ **Connectivity** section on the App
- the web page www.smeg.it/faq/smegconnect/



ErrE appears on the display: **appliance faulty**.

- Contact technical support.



ErrF appears on the APP: **appliance faulty**.

- Contact technical support.