

500 ±1

R58


1315155

INSTRUZIONI REEMPLIRE
INSTALLATION INSTRUCTIONS

This sink is specifically designed to be under-mounted in a solid surface countertop only.

CAUTION: sink edge may be sharp; handle with caution. Do not install a damaged sink - inspect carefully.

1. Cut out countertop using this template as a guide. THE SIZE SHOULD BE EXACT AS THIS SINK USES COORDINATING ACCESSORIES WHICH FIT PRECISELY IN THE CUT OUT.

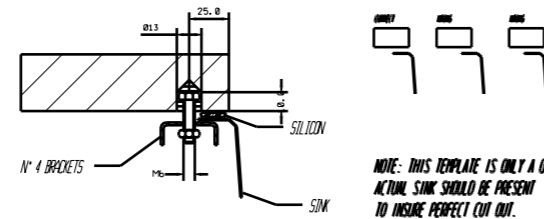

NOTE: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO INSURE PERFECT CUT OUT.

2. Determine placement of clip brackets. Pre-drill holes according to method desired based on countertop material. **NOTE:** You, the fabricator, may elect to epoxy in the screw or use a brass anchor.
3. Apply a bead of silicon evenly along the edge on underside of countertop.
4. Position and align sink over opening. Press sink onto silicon seal.
5. After re-checking alignment tighten clip brackets against sink edge.
6. Remove excess silicon.


HINT: After silicon cures, wipe inside edge with denatured alcohol. This will smooth out any rough areas.

DIMM PER LANELLI SOTTOP
ISTRUZIONI DI MONTAGGIO

Questo lavello è progettato esclusivamente per essere installato sotto top su di un materiale non poroso.

ATTENZIONE: il lavello può avere i bordi taglienti, maneggiare con estrema cura. Non installare un lavello danneggiato, controllati con attenzione.

1. Fara il top utilizzando la presente dima. Il formato di taglio della dima è utilizzabile solo per questo lavello.

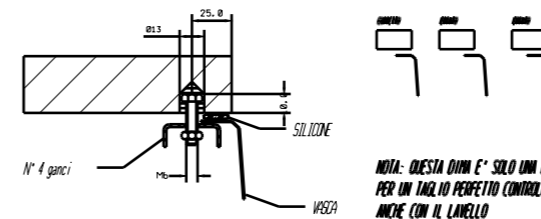

NOTA: QUESTA DIMA È SOLO UNA LINEA GUIDA. PER UN TAGLIO PERFETTO CONTROLLATE ANCHE CON IL LANELLO

2. Determina la posizione delle staffe di fissaggio. Faccia i fori utilizzando gli utensili adatti al materiale del top. **NOTE:** Se desidera, può utilizzare delle viti in ottone anti ossido.
3. Applichi una guarnizione di silicone sul top per tutto il perimetro del lavello
4. Posizioni e allinei bene il lavello. Premi il lavello sulla guarnizione di silicone.
5. Quindi ricontrolli l'allineamento del lavello con il foro del top e stringa le viti dei ganci.
6. Rimuovi l'eccesso di silicone.

SUGGERIMENTO: Dopo aver applicato il silicone, pulisci il bordo interno con alcool denaturato. Levigare le superfici di silicone ruvide.

Min. 80 mm



396 ±1