






	<p>The procedure for installing PORTOFINO hood chimneys is shown below.</p> <p>The measures for placing the magnets and brackets below are an example and may vary depending on the available space for installation.</p>
	<p>After placing the hood at a minimum distance of 650 mm from the underneath hob, attach the no. 6 magnets to the wall at the indicated distances.</p>

	<p>The detail of the magnets orientation to be fixed to the wall is shown below.</p>
	<p>After no. 6 magnets, fasten the no. 2 hooks to the wall at the indicated distances</p>


	<p>The detail of the hooks orientation to be fixed to the wall is shown below.</p>
 <p>Dettaglio A Scala: 1:1</p>	<p>Screw the chimney bracket to the upper chimney using no. 2 screws.</p>

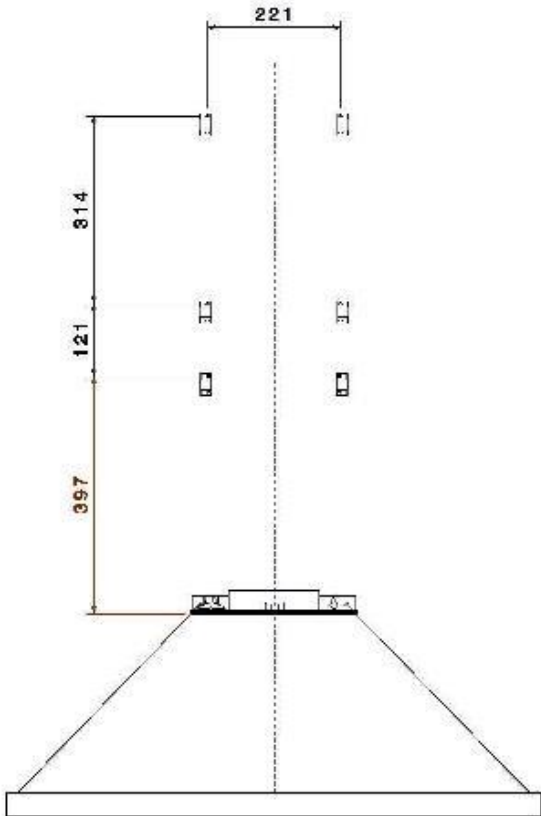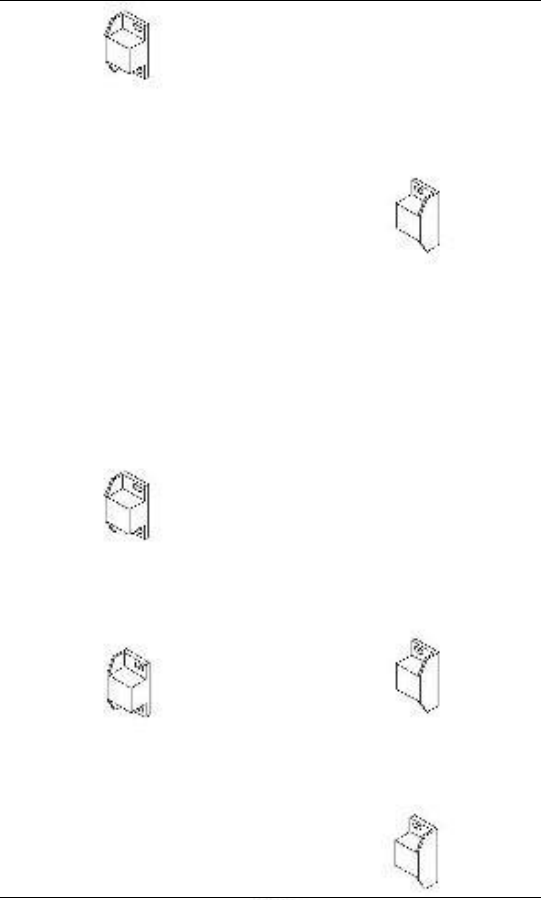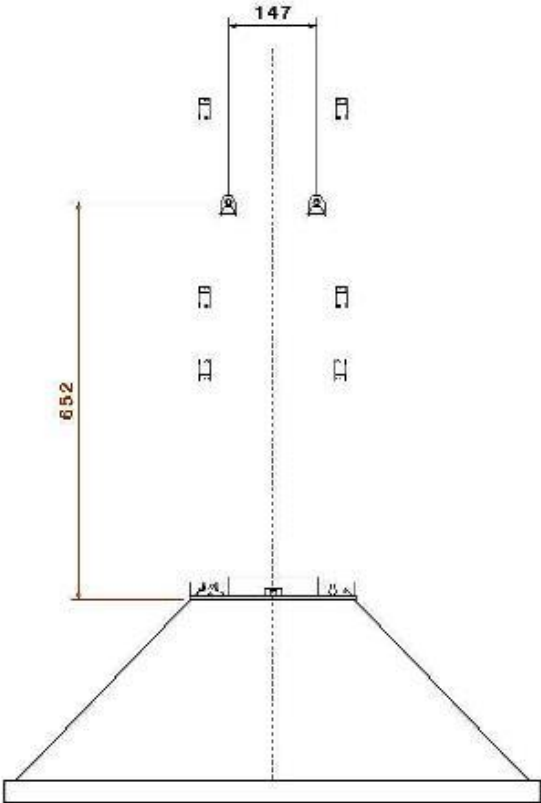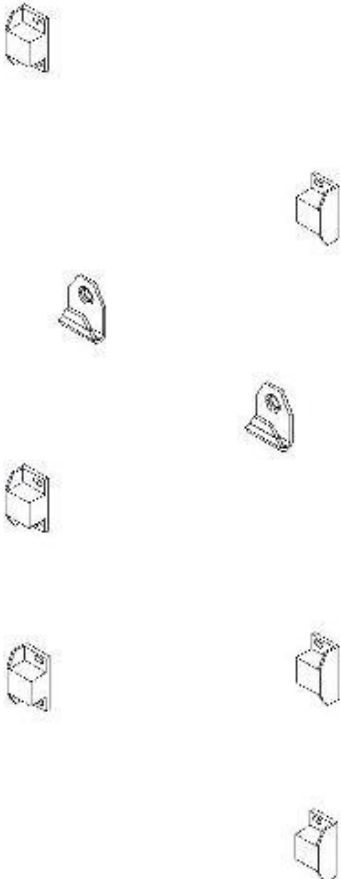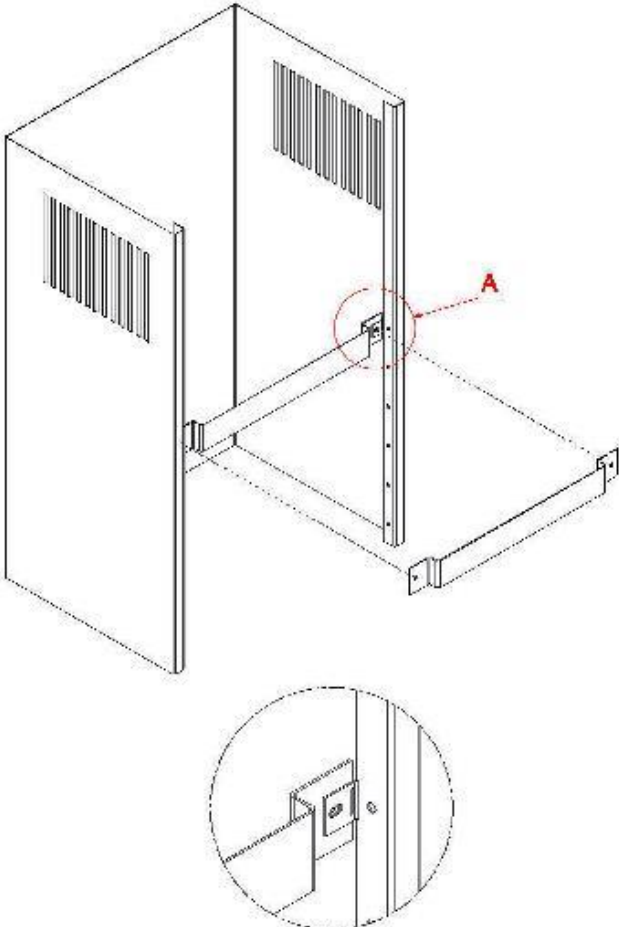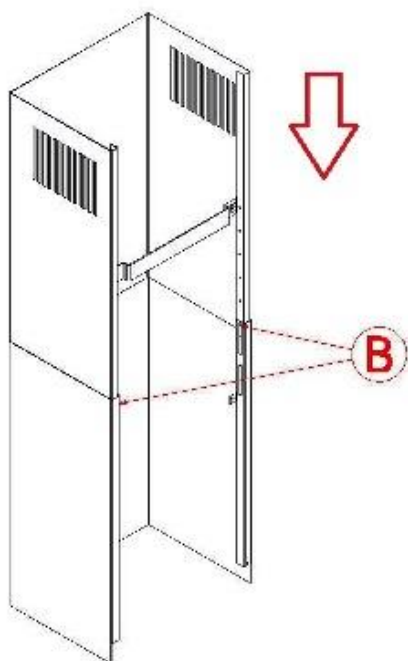


Insert the upper chimney into the lower chimney and fasten it with 2 screws.

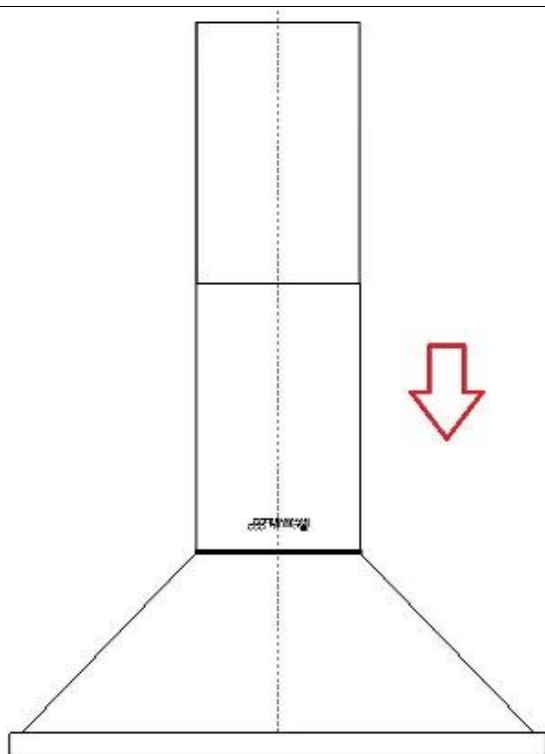

Fit the chimney inside the motor support.

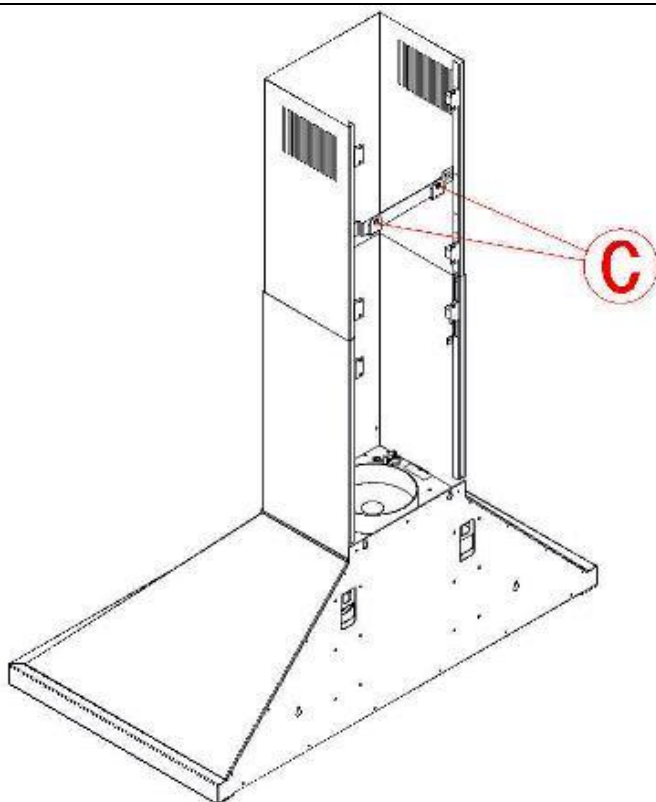

Be careful that the chimney bracket fits into the no. 2 hooks and that the chimney touch the magnets.

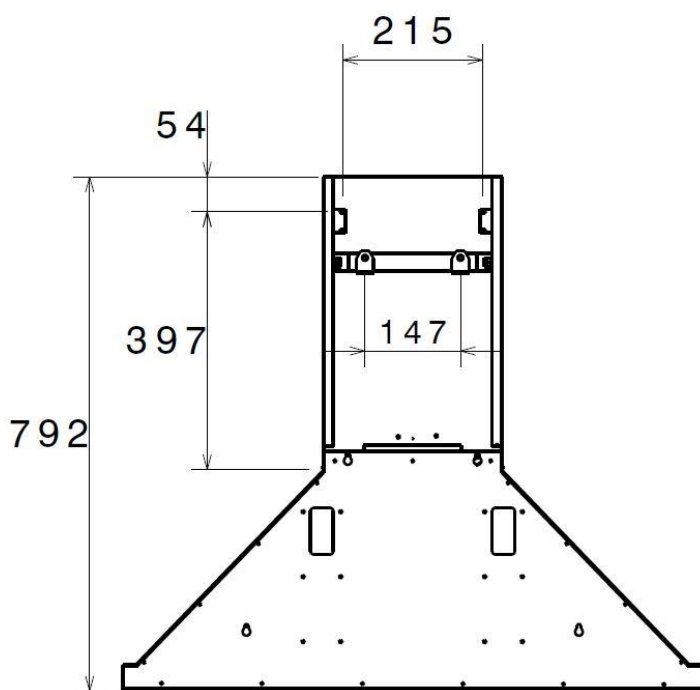

The sequence is also valid for the installation of the hood with only the lower chimney (rear view)