


Installation instructions

For Under cupboard and Universal model KDIAM Make cut out to the following sizes.

Model	Hood Size	Base size	Cut Out Dimension
KDIAM90AX	258x880	280x900	270x885
KDIAM90X	258x880	280x900	270x885

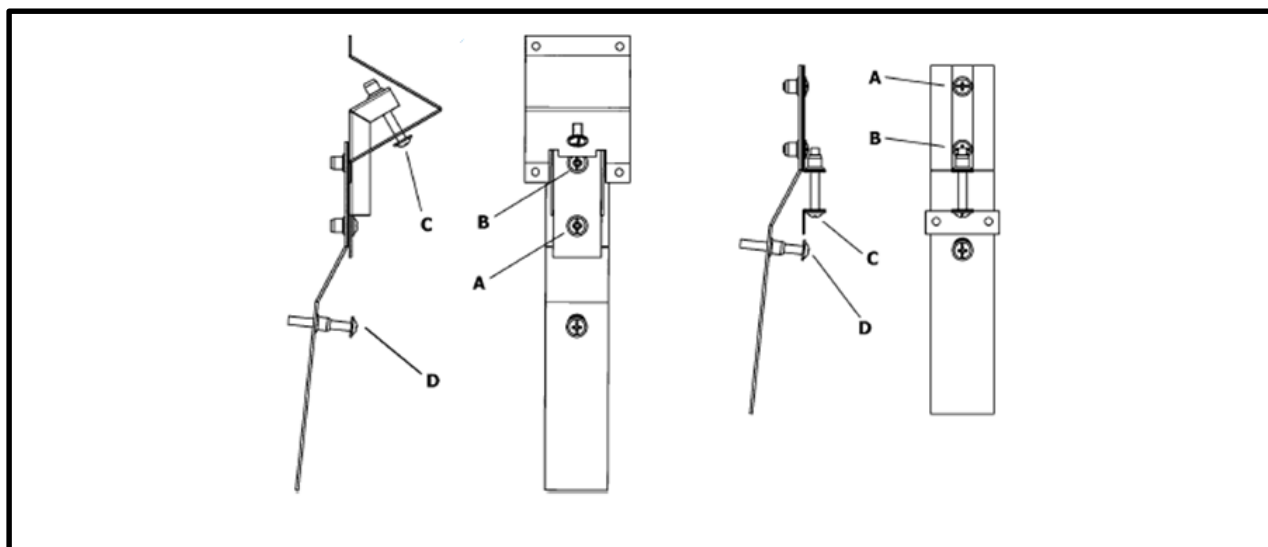

For the fixed Hoods

1. Loosen screws A and B by turning anti-clockwise.
2. Insert rangehood into cut out and turn screw 'C' clockwise to align rangehood with cupboard base. Do not over tighten.
3. Tighten screw 'A' by turning clockwise to lock fixing bracket.
4. Fit off ductwork as required.
5. To remove rangehood, turn screw 'D' clockwise.

