



DOLCE STIL NOVO


Tips & tricks for a perfect alignment
Consigli e suggerimenti per un perfetto allineamento



This installation manual is accompanied by a demonstration video that can be viewed at:

www.youtube.com/user/SmegSpA



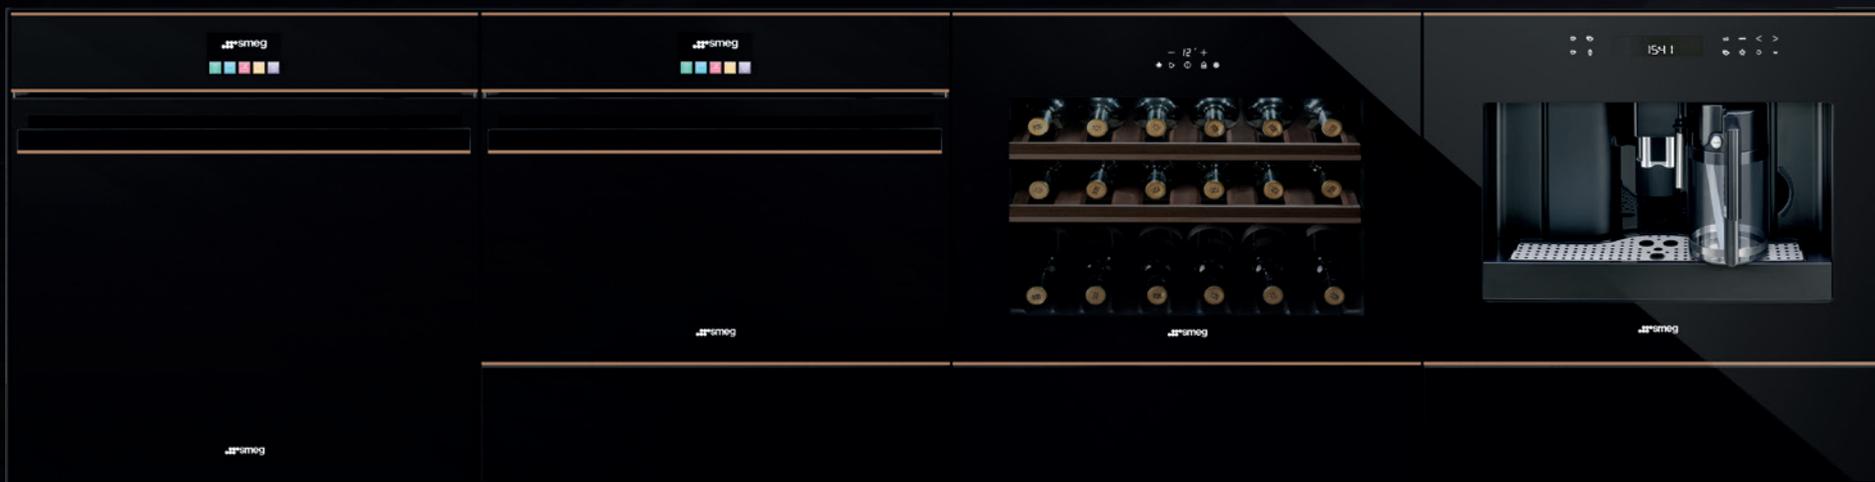


*Positioning the products
in 60 cm high recesses*



*Positioning the products
in 45 cm high recesses*



If the DOMESTIC APPLIANCES are to be INSTALLED IN 60 CM HIGH RECESSES:

1. Make sure that the unit is squared and level the support bases. (Fig. 1)
2. Make sure that the individual shelves are perfectly horizontal. (Fig. 1)
3. If there is **a 60 cm oven in the composition**, this should be the first product to

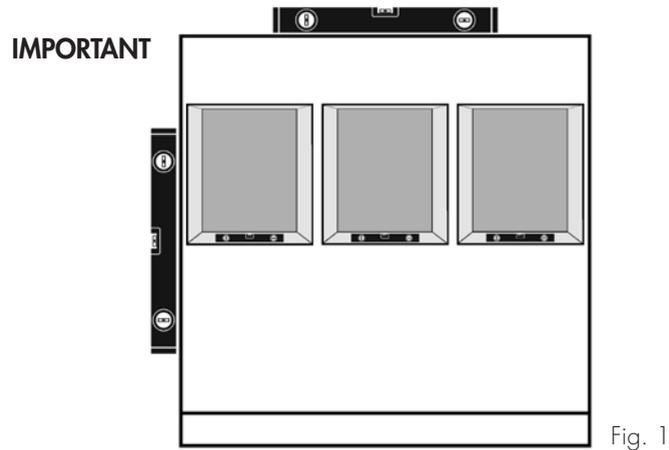


be inserted, centred and fastened to the unit. (Fig. 2).

4. If there is not a 60 cm oven in the composition, but **there is a 45 cm oven plus a drawer**, these should be the first products to be inserted, centred and fastened to the unit (Fig. 3).

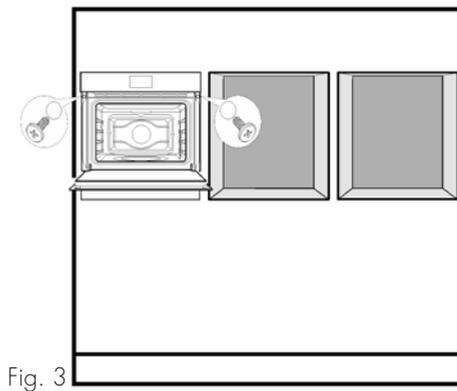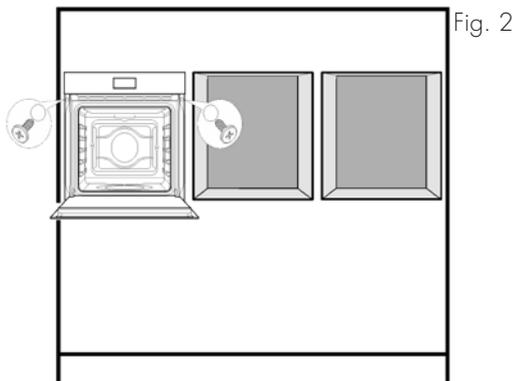

IMPORTANT:

- Insert all the drawers into remaining recesses, level them and align the lower trims with the lower trim of the 60 cm oven (Fig.4).
- The height of the front glass of the drawer can be regulated by adjusting the screws (Torx insert screws) inside the drawer (loosen the screws, adjust the height and retighten the screws). (Fig. 4)

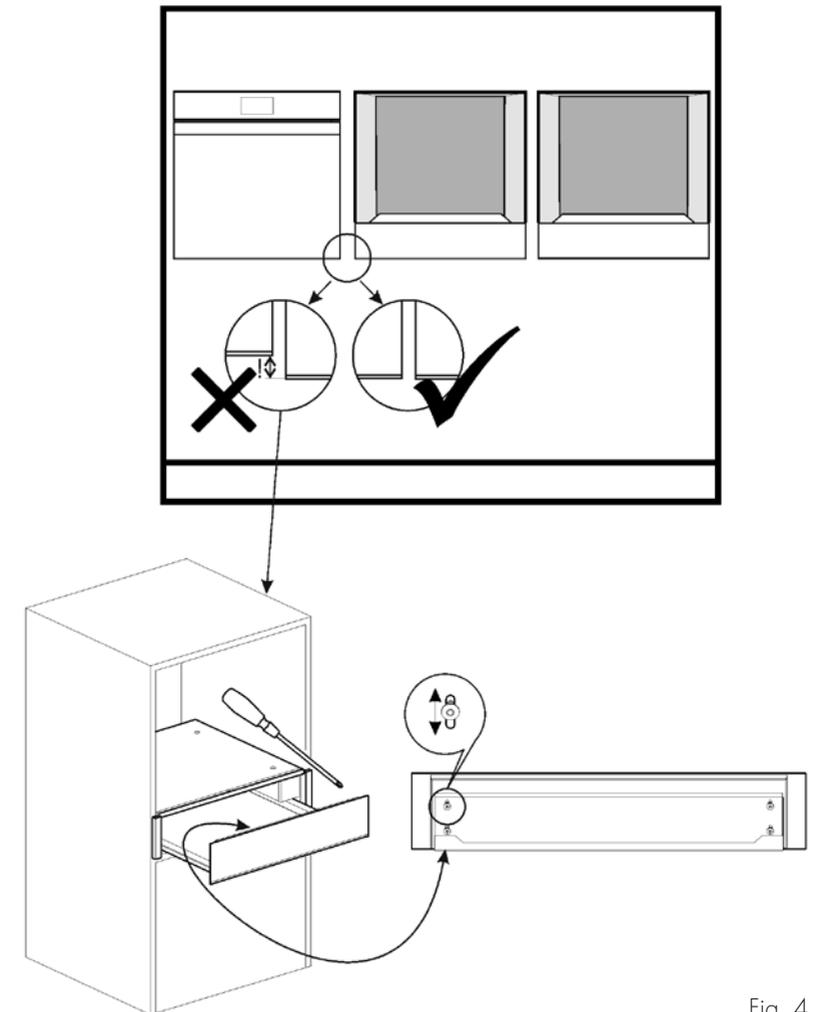

INSTALLATION - Products in 60 cm high recesses

5. Make sure that the drawers are flush with the door of the oven. If necessary, carry out the following adjustments:
- Use a 5 mm hex wrench to regulate the drawer fastening mechanism. Turn it clockwise to move the drawer outwards, turn it anticlockwise to move the drawer inwards (Fig. 5)
 - If the left or right hand sides of the front of the drawer are not perfectly flush, place a shim behind the drawer support bracket to compensate for any differences.

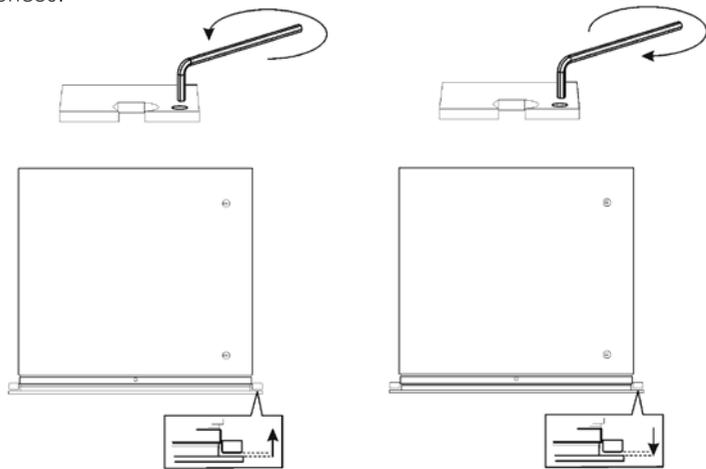


Fig. 5

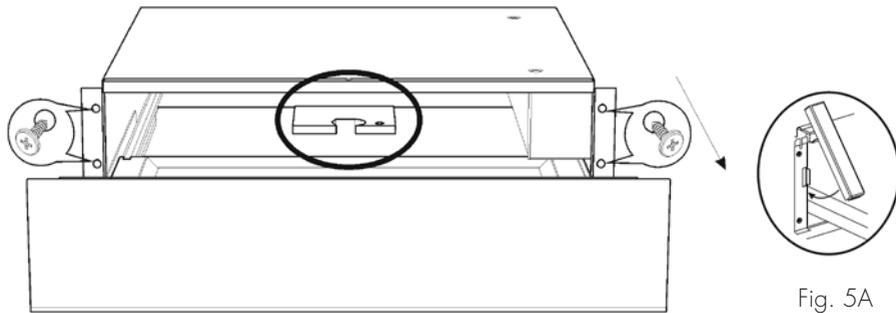


Fig. 5A


IMPORTANT:

- After adjustment is complete, fasten the drawer to the unit using the side screws and then install the covers (Fig. 5A).

6. Insert the first 45 cm product next to 60 cm oven that has already been installed.

• 45 cm Oven:

Align the upper trims of the ovens. If necessary, place shims* under the oven (Fig. 6) to compensate for any misalignment. Lastly, secure the product using the screws (Fig. 7)

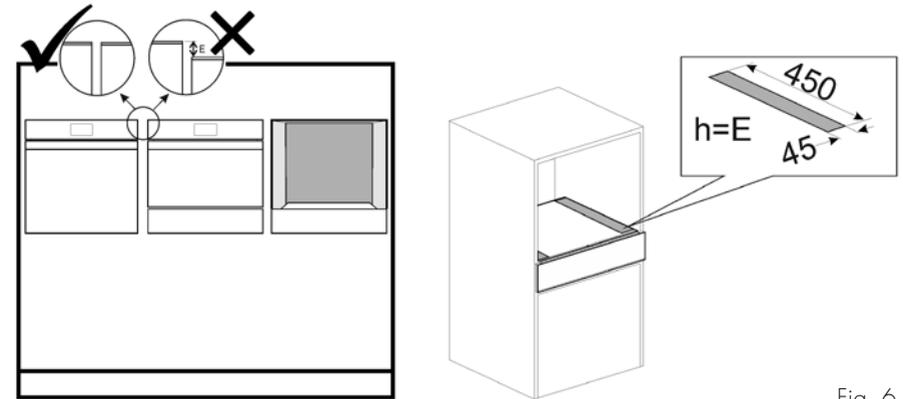

* shims not supplied

Fig. 6

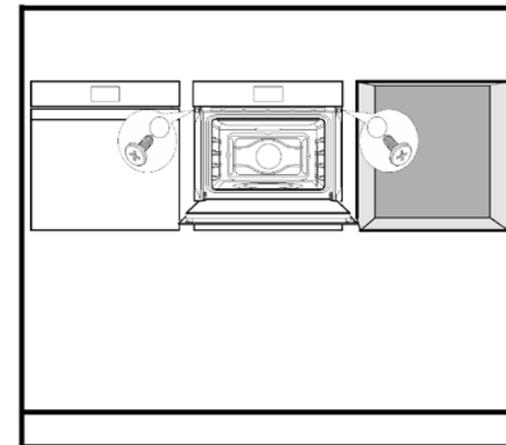


Fig. 7

- **Coffee machine:**

If the **width of the recess is 560 mm**: there is no need to place shims behind the plate of the guides. (Fig. 8)

If the **width of the recess is 562 mm** place the 1 mm shims provided behind the plates of the guides. (Fig. 8)

If the **width of the recess is 564 mm** place the 2 mm shims provided behind the plates of the guides. (Fig. 8)

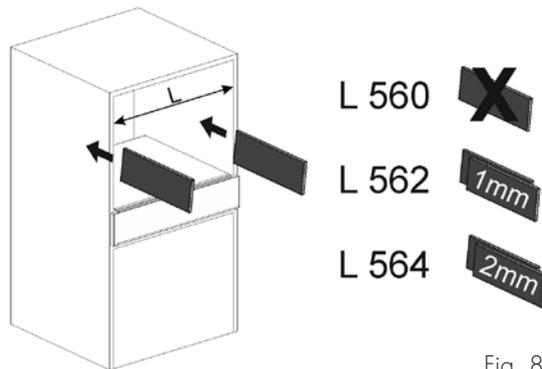


Fig. 8

Place the runners on the casing of the drawer whilst keeping them flush with the side of the unit.

Fix the brackets with the runners to the unit using 2 screws in the slotted holes. (Fig. 9)

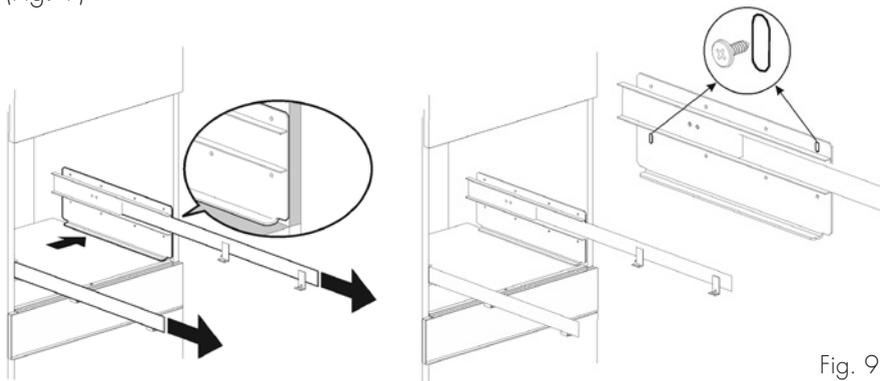


Fig. 9

Pull out the runners and place the coffee machine on them. (Fig. 10)

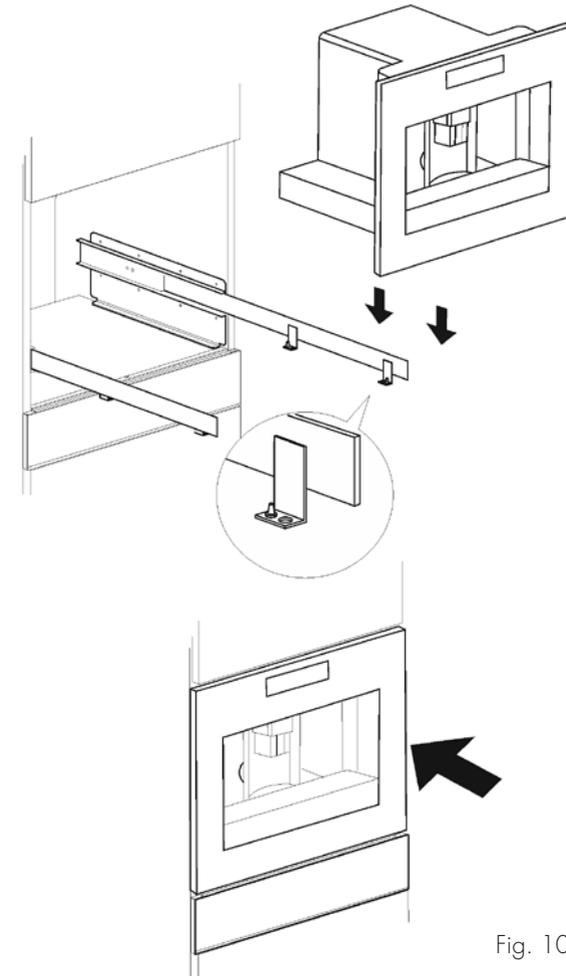


Fig. 10

Make sure that it is aligned horizontally with the other products and the drawer (make sure that the gap between the coffee machine and the drawer is uniform). If necessary, place a shim under one or both brackets. (Fig. 11)

Fasten it in place using all the screws only after the front of the machine has been correctly aligned. (Fig. 12)

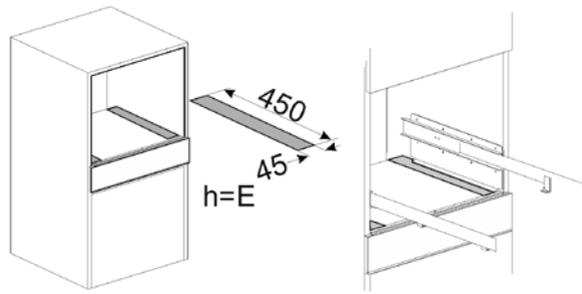
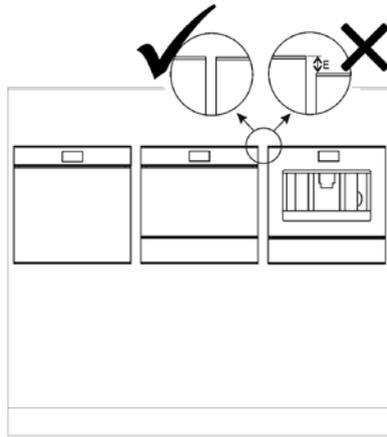


Fig. 11

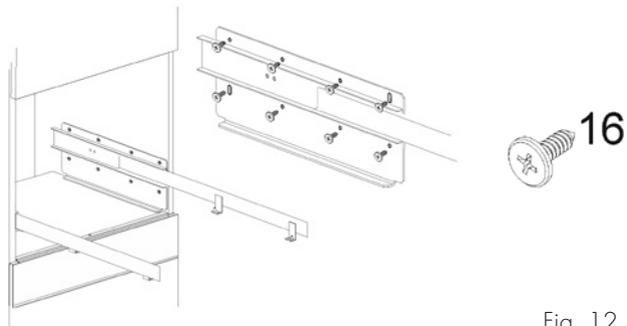


Fig. 12

Fasten the brackets using all the necessary screws.

• **Wine cooler:**

Place the wine cooler on the drawer and check its horizontal alignment. If necessary, place shims* under the feet of the wine cooler. (Fig. 13)

Fasten the wine cooler using the screws. (Fig. 14)

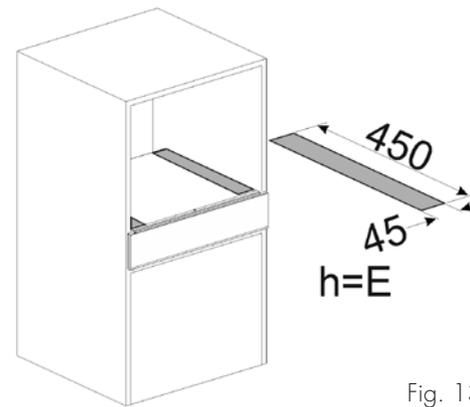
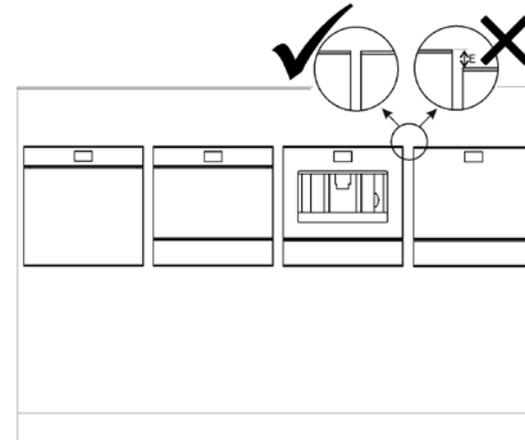


Fig. 13

* shims not supplied

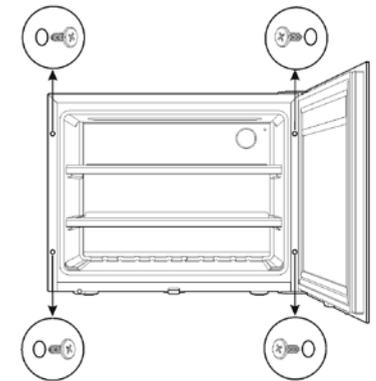


Fig. 14

7. Adjust the hinges of the doors around the products in order to make the gaps uniform.

If the DOMESTIC APPLIANCES are to be INSTALLED IN 45 CM HIGH RECESSES:

1. Make sure that the unit is squared and level the support bases. (Fig. 1)
2. Make sure that the individual shelves are perfectly horizontal. Otherwise, any misalignment must be corrected after the product has been inserted. (Fig. 1)

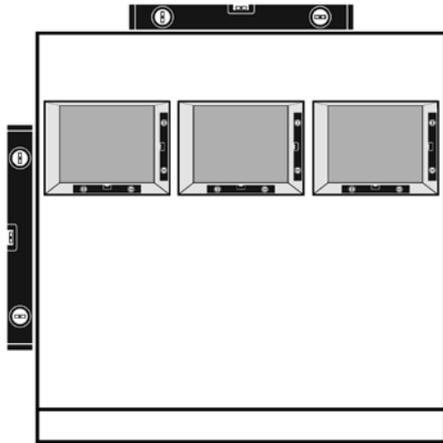


Fig. 1

3. If there is a **45 cm oven in the composition**, this should be the first product to be inserted, centred and fastened to the unit. (Fig. 2)

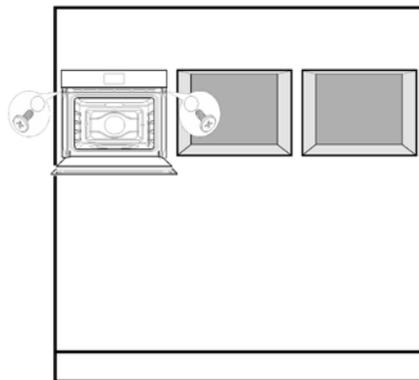




Fig. 2

4. Insert the second product next to 45 cm oven that has already been installed:

- **45 cm Oven:**

Align the upper trims of the ovens. If necessary, place shims* under the oven to compensate for any misalignment.

Lastly, secure the product using the screws (Fig. 3)

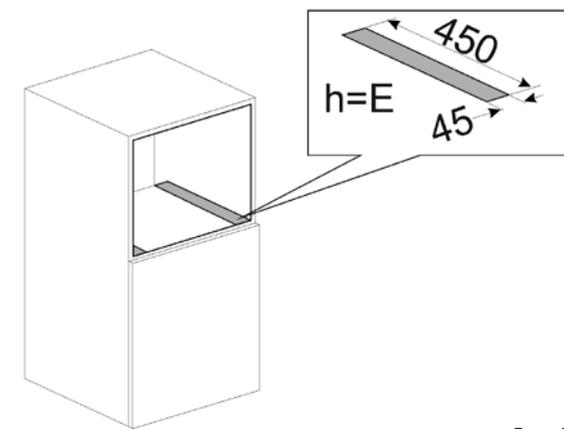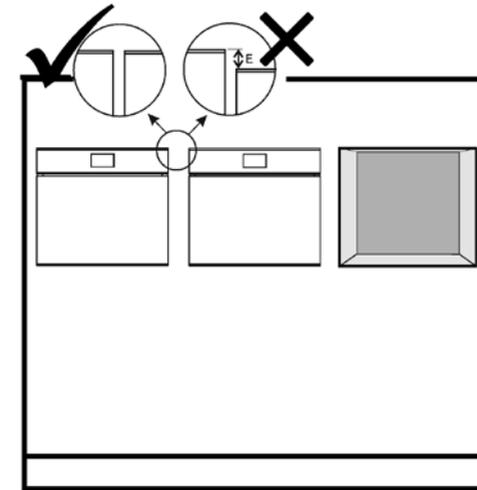

* shims not supplied

Fig. 3

INSTALLATION - Products in 45 cm high recesses

- **Coffee machine:**

If the **width of the recess is 560 mm**: there is no need to place shims behind the plate of the guides. (Fig. 5)

If the **width of the recess is 562 mm** place the 1 mm shims provided behind the plates of the guides. (Fig. 4)

If the **width of the recess is 564 mm** place the 2 mm shims provided behind the plates of the guides. (Fig.4)

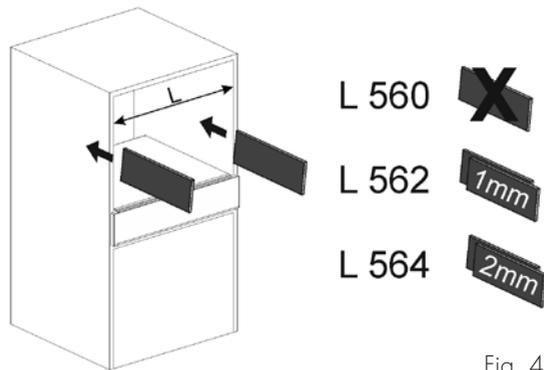


Fig. 4

Place the runners on the shelf of the unit whilst keeping them flush with the side of the unit.

Fix the brackets with the runners to the unit using 2 screws in the slotted holes. (Fig. 5)

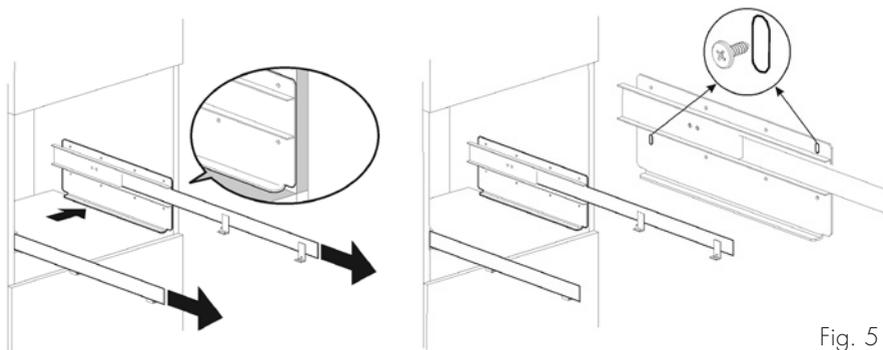


Fig. 5

Pull out the runners and place the coffee machine on them. (Fig. 6)

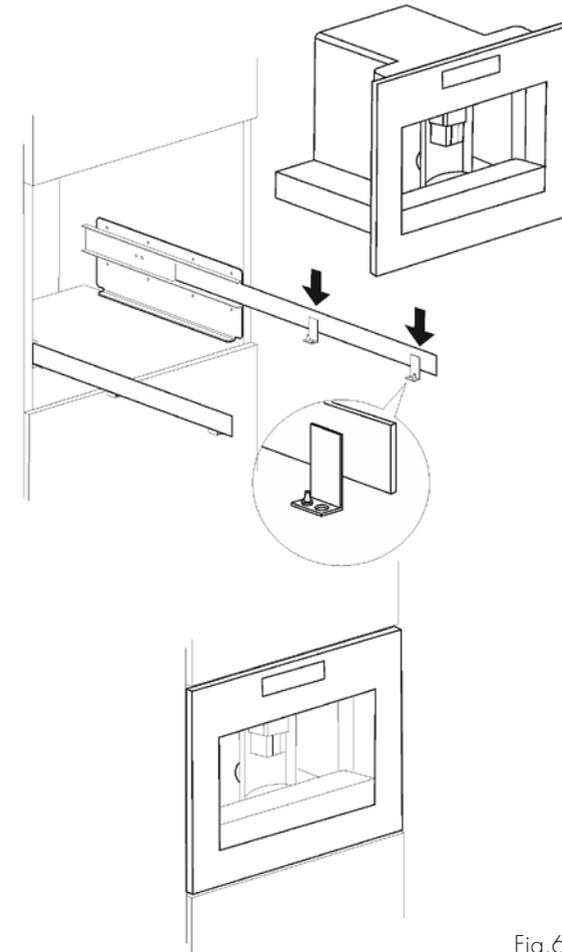


Fig.6

Make sure that it is aligned horizontally with the other products. If necessary, place a shim* under one or both brackets. (Fig. 7)

Fasten it in place using all the screws only after the front of the machine has been correctly aligned. (Fig.8)

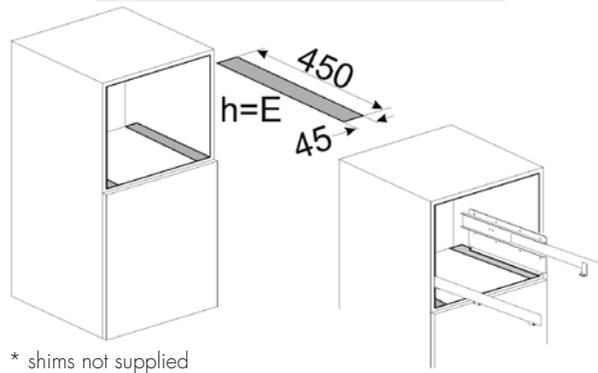
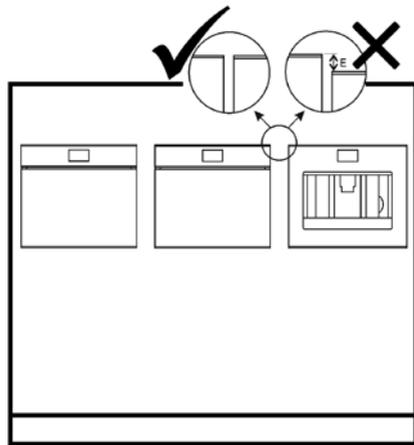


Fig. 7

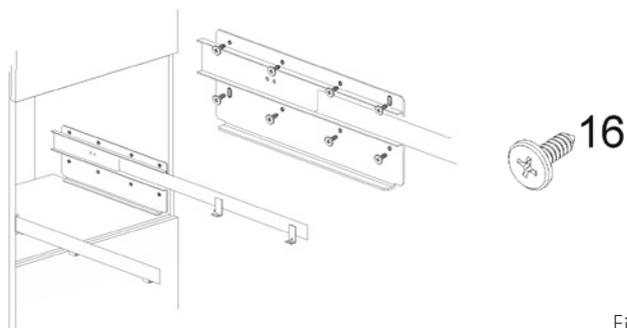


Fig. 8

Fasten the brackets using all the necessary screws.

• Wine cooler:

Insert the product in the unit and centre it. Make sure that the upper trims of adjacent products are aligned. If necessary, place shims under the feet of the wine cooler (Fig. 9) to compensate for any misalignment. Lastly, secure the product using the screws. (Fig. 10)

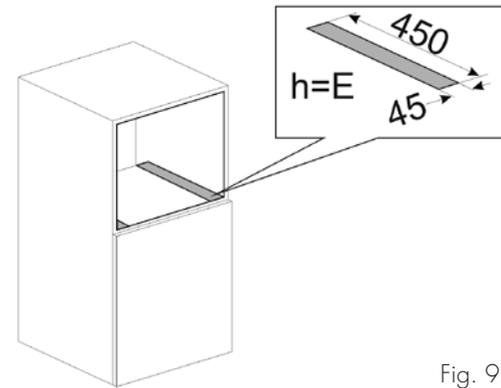
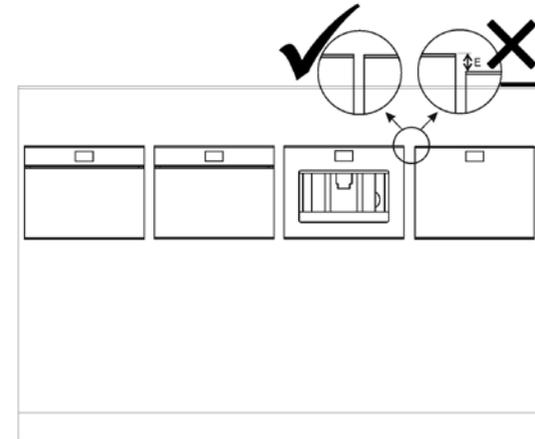


Fig. 9

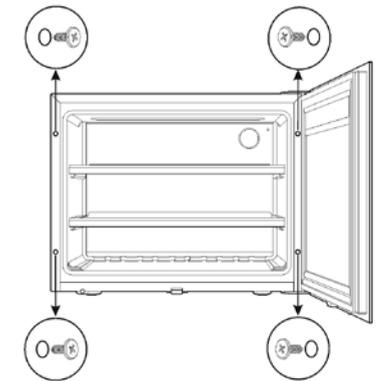


Fig. 10

- Adjust the hinges of the doors around the products in order to make the gaps uniform.

